

HOW TO DIFFERENTIATE BETWEEN Fourth and Fifth Generation Hydrovars



CROSS OVER CHART

	4th Generation	5th Generation
Wire and Conduit	Right hand side	Left hand side
Push Buttons	One single row (Power, Run, Error LEDs)	LEDs below main push buttons
Wiring Cover	None	Removable black cover (6 screws) wiring terminals below

Model Numbers

HVM1202	10073L1AAUST
HVM1203	10073L2AAUST
HVM3403	10073LDAAUST
HVM3405	10073LFAAUST
HVM3407	10073LGAAUST
HVM3410	10073LHAAUST
HVM3415	10073LLAAUST

Xylem Inc.

2881 East Bayard Street Ext., Suite A, Seneca Falls, NY 13148

Phone: (866) 325-4210 Fax: (888) 322-5877

www.xyleminc.com