



Global Water
800-876-1172 • globalw.com



Global Water

Instrumentation, Inc.

11257 Coloma Road
Gold River, CA 95670
T: 800-876-1172
Int'l: (916) 638-3429, F: (916) 638-3270

4-20mA Weather Station: WE900

5/28/02



Global Water
800-876-1172 • globalw.com

Congratulations on your purchase of the Global Water WE900 4-20mA Weather Station. This instrument has been quality tested and approved for providing accurate and reliable measurements. We are confident that you will find the WE900 to be a valuable asset for your application. Should you require assistance, our technical staff will be happy to help.

Table of Contents

I.	Checklist • • • • • • •	Page 3
II.	Inspection • • • • • • •	3
III.	Description • • • • • • •	3
IV.	Installing the 4-20mA Weather Station • • •	4
V.	4-20mA Weather Station Calibration Information •	5
VI.	Specifications • • • • • • •	5
VII.	Maintenance • • • • • • •	5
VIII.	Troubleshooting • • • • • • •	6
IX.	Warranty • • • • • • •	7
X.	Appendix A: Optional Equipment Mounting Instructions	8

* Copyright © Global Water Instrumentation, Inc. 2002



Global Water
800-876-1172 • globalw.com

I. Checklist

- a. Weather Sensors
- b. Weather Sensor Manual
- c. Mounting Hardware
- d. 4-20mA Weather Station Manual

II. Inspection

- a. The WE900 unit was carefully inspected and certified by Global Water's Quality Assurance Team before shipping. If any damage has occurred during shipping, please notify Global Water Instrumentation, Inc. and file a claim with the carrier involved.

Use the checklist to ensure that everything needed to operate the WE900 was shipped.

III. Description

- a. The Global 4-20mA Weather Station, WE900, is a rugged and reliable system for monitoring weather related parameters.



Global Water
800-876-1172 • globalw.com

IV. Installing the 4-20mA Weather Station

- a. Please refer to Appendix A prior to installing the 4-20mA Weather Station to review any optional sensor's mounting instructions that may modify the standard setup.
- b. Each sensor comes equipped with mounting hardware for a 1" diameter pipe.
- c. The 4-20mA Weather Station stand consists of a 1" diameter stainless steel cross bar with a T fitting and the mast (two 1" diameter tubes connected together with a pvc insert). The top piece of the mast has a T fitting with a 1" stub attached also.
- d. Insert the bottom of the mast into a solid base and secure it. Global Water sells a Tripod for this purpose, WE830.
- e. Slide the top of the mast onto the pvc insert to complete the mast.
- f. Mount the cross bar to the top of the mast using the attached T fitting. Tighten the set screw with the enclosed allen wrench. Ensure that the cross bar is level. NOTE: For best results the cross bar should be at least 8' above the ground or roof.
- g. The Wind Speed and Wind Direction sensors should be mounted on the opposite ends of the cross bar. Loosen the set screw holding the Wind Direction sensor in the elbow. Line up the notches on the Wind Direction Sensor, turn the sensor until the notches face north, and secure the sensor.
- h. The Temperature Sensor and Humidity Sensor are pressure fitted inside the Solar Shield. The Solar Shield has a 1" elbow that mounts on the stub attached to the top portion of the mast. Place the elbow on the stub and secure with the set screw.
- i. If the mast is in an area of extreme wind it may be necessary to secure the 4-20mA Weather Station with guy wires (not included).



Global Water
800-876-1172 • globalw.com

V. 4-20mA Weather Station Calibration Information

- a. Each Weather Sensor will have to be calibrated to your PLC, RTU, or SCADA system. Calibration numbers have been attached to each sensor. Refer to the Weather Sensor manual to determine how often each sensor should have its calibration checked.

VI. Specifications

- a. Refer to the Weather Sensor manual for individual sensor specifications.
- b. 4-20mA Weather Station Stand
Material: 1" Stainless Steel Tube

VII. Maintenance

- a. Refer to the Weather Sensor manual for individual sensor maintenance instructions.
- b. Periodic cleaning of the stand may be necessary. Use soap and water.



Global Water
800-876-1172 • globalw.com

VIII. Trouble Shooting

- a. Refer to Weather Sensor manuals for more information.

Other issues

- b. Call us for tech support: 800-876-1172 or 916-638-3429 (many problems can be solved over the phone). Fax: 916-638-3270 or Email: globalw@globalw.com.

Be prepared to describe the problem being experienced, including specific details of the application and installation and any additional pertinent information.

- c. In the event that the equipment needs to be returned to the factory for any reason, please call to obtain a RMA # (Return Material Authorization). DO NOT return items without a RMA # on the outside of the package.

Include a written statement describing the problems.

Send the package with shipping prepaid to Global Water's factory address. Insure the shipment, as the warranty does not cover damage incurred during transit.

- d. When calling for tech support, please have the following information ready;
 - 1. Model #.
 - 2. Unit serial number.
 - 3. P.O.# the equipment was purchased on.
 - 4. Global Water's sales number or the invoice number.
 - 5. Repair instructions and/or specific problems relating to the product.



Global Water

800-876-1172 • globalw.com

IX. Warranty

- a. Global Water Instrumentation, Inc. warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment from factory. Global Water's obligations under this warranty are limited to, at Global Water's option: (I) replacing or (II) repairing; any products determined to be defective. In no case shall Global Water's liability exceed the products original purchase price. This warranty does not apply to any equipment that has been repaired or altered, except by Global Water Instrumentation, Inc., or which has been subject to misuse, negligence or accident. It is expressly agreed that this warranty will be in lieu of all warranties of fitness and in lieu of the warranty of merchantability.
- b. The warranty begins on the date of the product's invoice.



Global Water
800-876-1172 • globalw.com

X. Appendix A: Optional Equipment Mounting Instructions

Barometric Pressure Sensor Mounting Instructions

- a. The barometric pressure sensor should be mounted in a manner that protects it from the elements, but exposes it to the air. Global Water recommends mounting it in some type of weather resistant enclosure that is vented. If this is not practical the sensor can be mounted, with the sensing nozzle face down, on the station's stand using a hose clamp or other type of strap.

Solar Radiation Sensor Mounting Instructions

- a. The Solar Radiation Sensor comes with mounting hardware similar to the Wind Direction and Wind Speed Sensors.
- b. The T fitting and stub should be mounted on the upper portion of the mast and secured at a height and in a direction where the sensor will not be shaded by any other sensor or object. Tighten the T fitting's set screws with the enclosed allen wrench to secure the stub in place.
- c. The Solar Radiation Sensor has a 1" elbow that mounts on the stub. Place the elbow on the stub and secure with the set screw.

Tipping Bucket Mounting Instructions

- a. See Tipping Bucket manual for installation instructions.

Solar Panel Mounting Instructions

- d. The Solar Panel comes with mounting hardware similar to the Wind Direction and Wind Speed Sensors.
- e. The T fitting and stub may be mounted any where on the mast as long as the solar panel faces the sun's general path across the sky, refer to the solar panel manual for further instructions, available online at, www.globalw.com, in the downloads section. Tighten the T fitting's set screws with the enclosed allen wrench to secure the stub in place.
- f. The Solar Radiation Sensor has a 1" fitting that mounts on the stub. Place the fitting on the stub and secure with the set screw.