

Oxix[®]

Dissolved Oxygen Transmitter



Installation and User Manual

CE CERTIFICATE OF CONFORMITY

This product complies with the requirements concerning electromagnetic compatibility (EMC) stipulated in Council directive no. 89/336/EEC of 3rd may 1989, alteret at directive no. 92/31/EEC, on the approximation of the laws of the member states relating to electromagnetic compatibility.

CE approvals

We declare that the Oxix[®] transmitter complies with the values stipulated in EN-61010-1 and EN 61326-1.

Ex approval

The Oxix[®] transmitter is approved for mounting in explosive amospheres: Ex II G3.

Table of Contents

1. Introduction	7
Operating Principles	10
Features	11
2. Safety, Repair and Product Identification	13
Safety Instructions	13
Physical Mounting	13
Repair	13
Product Identification	13
3. Specifications and Order Numbers	15
Specifications	15
Order Numbers	17
4. Sensor Installation	19
Physical Sensor Installation	20
Preparation	20
Positioning the Sensor	20
5. Sensor Calibration	21
Zero-point Calibration Check	21
2-point Calibration	21
6. Converter	23
Electrical Mounting	23
Power Supply	24
Display Connector	24
Changing the Power Supply Voltage 230/115 V AC	25
Analogue Output	27
Digital Input	28
Converter Terminals	29
Sensor and Mounting Kit / Connection Board Terminals	30
7. System Configuration Examples	31
Magflux[®] with Blind Lid and Oxix[®] with Display Unit	32
Wiring Schematic #1	33
SuSix[®] with Blind Lid, Magflux[®] with Blind Lid and a Remote Display	34
Wiring Schematic #2	35

8. Startup	37
Initial Checks before Power-up	37
Initial Power-up	37
Initial Measurement	37
Language Selection	37
Display Read-out, one connected unit	38
Display Read-out, several connected units	39
Display Keys	39
9. Oxix[®] Menus	41
Converter Overview Menu	41
Specify Main Screen	42
Datalogger	44
Graph Display	46
Password	47
Sensor Name	49
Converter Setup	51
Averaging	52
Units	52
mA Output	53
Cleaning	54
High alarm	56
Low alarm	57
Sensor error	58
Status	59
Factory settings	60
Service Menu - Digest	61
Service Menu - Detailed	62
Display Setup	72
Language	73
Set clock	74
Modbus	75
Factory settings	77
Display SW version	77
10. Mechanical Dimensions	79
Sensor	79
Converter and Display Unit	80
Immersion Fitting	81
11. Maintenance	83
Cleaning the sensor	83
Cleaning the converter display	83
Functional Tests	83
Service Contract	83

Appendix A. Pop-up and Error Messages	85
Appendix B. MJK-Field Link Software	89
Important Notes!89
A. Connect a PC to the Oxix [®]89
B. Save Log Data91
C. Upgrade Display Firmware91
D. Upgrade Converter Firmware93
E. Install/Add Languages.94
Appendix C. Front Panel Cut-out Drawing	95
Appendix D. Log Files	97
Appendix E. Input/Output Connections	101
Appendix F. Quick Guide - Oxix Calibration	102
Zero Point Calibration.103
Span Calibration.104
Salinity Correction Factor105
Restore Factory Calibration106
Guide to Oxygen-free Solution for Checking Oxix D.O. Sensor Zero Point107

Main Menu Overview	108
Converter Setup Menu Overview	112
Service Menu Overview	120
Display Setup Menu Overview	126
Index	Index-1

This page intentionally left blank.

1. Introduction

Thank you for choosing the MJK Oxix[®] Dissolved Oxygen Transmitter. We have done our utmost to design and manufacture a quality transmitter that satisfies your requirements:

- **High performance optical sensor**
- **No calibration**
- **No spareparts needed in sensor's 10 year lifetime**
- **Air or water jet cleaning system is standard**
- **Measurements not affected by sunlight or dry environment**
- **Large, easy-to-read display with trend curve capability**
- **Multiple languages**
- **Built-in datalogger**
- **No moving parts, oxygen consumption or risk of poisoning**
- **Mounting accessories** (optional)

The Oxix[®] transmitter is easy to install and put into service. However, read this manual first to get familiar with the Oxix[®] transmitter and all its features.

The equipment must be handled and operated as instructed by the manufacturer, MJK Automation A/S to ensure stable operation and accurate measurements.

You can always contact your local representative or the MJK hot lines for advice and guidance:

- | | | |
|--------------------|-----------------------|--|
| • Europe | Tel.: +45 45 56 06 56 | E-mail: mjk@mjk.com |
| • Denmark | Tel.: +45 45 56 06 56 | E-mail: mjk@mjk.dk |
| • Norway | Tel.: +47 69 20 60 70 | E-mail: mjk@mjk.no |
| • Holland | Tel.: +31 251 672171 | E-mail: mjknl@mjk.com |
| • USA | Tel.: +1 847 482 8655 | E-mail: mjkusa@mjk.com |
| • Australia | Tel.: +61 3 9758 8533 | E-mail: ns@mjk.com |

Visit our web site at www.mjk.com to learn more about MJK Automation, our other products and the people behind them.

Oxix[®] is a registered trademark of MJK Automation A/S, Denmark.

MJK Automation A/S is a Xylem Brand.

About this Manual

This manual is divided into one table of contents, eleven chapters, five appendices, four continuous menu overview flow charts and one index.

1. Introduction

Contains a presentation of the Oxix[®] Dissolved Oxygen Transmitter, the structure of this manual, the operating principles and the top features.

2. Safety, Repair and Product Identification

Provide answers to issues regarding safety, mounting, repair, restrictions and product identification.

3. Specifications and Order Numbers

The system specs and order numbers are listed for quick access.

4. Transmitter Installation

Contains installation guidelines for positioning of the transmitter in liquids, distances to walls and other solid faces, and installation in tubes.

5. Sensor Calibration

The Oxix[®] sensor is factory calibrated and requires no re-calibration.

6. Converter

Describes the physical specifications and installation rules for the converter such as power supply, in- and outputs, sensor/converter/display configurations, etc.

7. System Configuration Examples

Illustrate how Oxix[®] Dissolved Oxygen Transmitter can be interconnected with for example MJK MagFlux[®] flow meters in real-life scenarios.

8. Startup

Describes important checks and basic settings to get started including the display and keyboard user interface.

9. Oxix[®] Menus

Contains a comprehensive description of the Oxix[®] menus, options and utilities.

10. Mechanical Dimensions

Lists the Oxix[®] Dissolved Oxygen Transmitter dimensions.

11. Maintenance

Contains procedures for cleaning the sensor and the display.

Appendix A. Pop-up Events / Error Messages

Lists possible pop-up messages, explains their meaning and offer solutions to error conditions.

Appendix B. MJK-Field Link Software Upgrade

Describes in detail how to utilise the unique and intuitive MJK-Field Link software program to upload new display and converter firmware versions.

Appendix C. Front Panel Cut-out Drawing

A 1:1 scale drawing of the front panel outline and cut-out area for installation and mounting purposes.

Appendix D. Log Files

An example log file illustrates the format and explains the entries.

Appendix E. Digital Input/Output Connections

Illustrates how the digital in- and outputs can be interconnected.

* * * * *

Main Menu Overview

A continuous presentation of the top level menu structure.

Converter Setup Menu Overview

A continuous presentation of the converter setup menu structure.

Service Menu Overview

A continuous presentation of the service menu structure.

Display Setup Menu Overview

A continuous presentation of the display configuration menu structure.

Operating Principles

The MJK Oxix[®] Dissolved Oxygen Transmitter is designed for measuring the oxygen contents in open tanks exposed to sunlight, wells and closed containers.

The Oxix[®] sensor function is based on the fluorescence principle and does not consume oxygen like membrane-type sensors. It is rugged and designed to handle tough applications.

Light pulses with a wavelength of 475 nm are transmitted to a ruthenium compound immobilized in a sol-gel matrix.

The ruthenium absorbs the light energy by changing the outer electron's energy level. The unstable electron then collapses and returns back to its original energy state and at the same time emits the surplus energy as a photon with a wavelength of 600 nm. This process is also referred to as fluorescing.

When the intensity of the transmitted light pulses is tightly controlled, the amount of fluorescing is predictable and repeatable.


If free oxygen molecules are present, the photon energy is absorbed by the oxygen molecules without any light emission, and the amount of fluorescing is consequently reduced (also referred to as fluorescence quenching).

It is therefore possible to determine the amount of dissolved oxygen by measuring the amount of fluorescence quenching (light intensity).

Features

Flexible Installation

MJK's modular design allows up to 300 meters (950ft.) between the sensor and the converter, and the Display Unit can be mounted up to 1000 m (3000 ft.) from the signal converter with ordinary twisted wires.

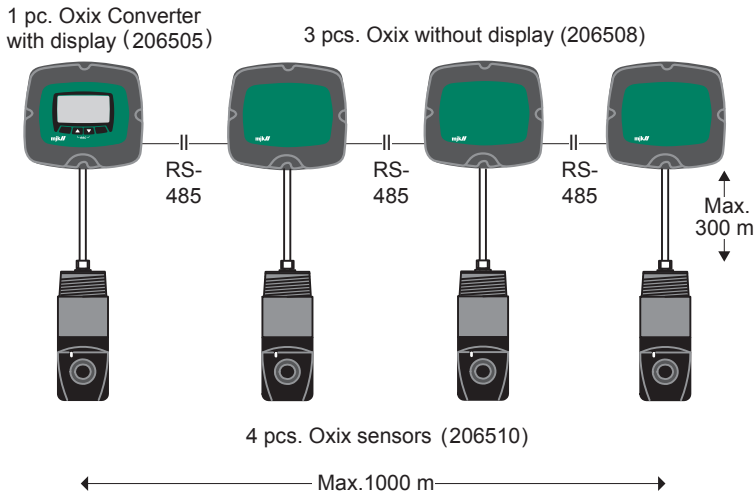

One Display Unit can control up to four MagFlux[®] flow meters, SuSix[®] transmitters and/or Oxix[®] transmitters for greater economy, space savings and an improved overview of the multiple measurement values.

Simple to Operate

The Oxix[®] Display Unit has a mobile phone-like menu structure and can display text in several selectable languages.

PC Connection

Oxix[®] allows downloading setup configurations, uploading new instrument software updates and display customization. The onboard data logger captures 20,000 readings which are displayed as an electronic graph and can be retrieved as a CSV file on a PC. This connectivity is achieved with a common USB port and the free MJK Field Link software.

Flexible In- and Outputs

The Oxix[®] Transmitter has one 4-20 mA analogue output, two digital outputs for alarms or control, and one digital input for resetting alarms, batches, etc.

User-definable Text

Up to five lines of text and readings can be configured by the user. The graphic display is automatically adjusted to show the largest characters possible. Alarms can be displayed as pop-up alarms until they are reset.

Modbus[®] Communication

The Display Unit uses the Modbus[®] RTU communication protocol to connect to the Oxix[®] Transmitter. The Transmitter can in turn connect to SCADA systems with its Modbus[®] communication protocol.

2. Safety, Repair and Product Identification

Safety Instructions

- Read this manual carefully.
- Pay attention to the environment on the installation site.
- Wear necessary protective equipment and follow all current safety regulations.
- Oxix[®] can invoke a start signal for dangerous machinery. Always ensure that connected machinery and other equipment are effectively put out of service (that is to remove the main fuses and lock main and security switches in off-position) before commencing configuration, fault finding, servicing, maintenance work, etc.
- **WARNING:** There is a risk of lethal, electrical shock from the "Mains supply" terminals "N" and "L". Be careful not to touch these terminals when the Oxix[®] front cover is removed.
- **WARNING:** Incorrect installation or use can lead to body injury and/or material damage!

Physical Mounting

The Oxix[®] converter/display unit **must not** be mounted in explosion hazardous areas!

Oxix[®] may only be installed and commissioned by authorized MJK personnel, and all national and local regulations must be complied with.

Repair

Repair must only be made by authorized MJK personnel or by a service representative approved by MJK.

Product Identification

A delivery will usually consist of an Oxix[®] sensor and an Oxix[®] converter with or without a display unit.

Check that the item(s) delivered corresponds to the ordered item(s). The part number is printed on an identification label stuck on the converter shipping box and on a label on the converter itself.

This page intentionally left blank.

3. Specifications and Order Numbers

Specifications

Oxix [®] Transmitter	
Accuracy	+/- 0,1% of reading
Measuring input	RS 485
Analog output	One active 4 - 20 mA, galvanically isolated (max. load 800 Ω)
Digital outputs	One voltage-free electromechanical relay (max. 50 V DC / 1 A) One optically isolated MOSFET relay (max. 50 VAC / V DC / 120 mA)
Digital inputs	One, max. 30 V DC, < 5 V DC = 0(low), > 10 V DC = 1(high), pulse length > 100 ms
Communication	MODBUS [®] RTU-mode, 9600 baud, 2-wire RS 485, slave-mode
Interface	RS 485 for connection to Display Unit or PLC
Power supply	10 - 30 V DC, or 24 V AC, 50 / 60 Hz ± 10 % or 115 V AC, 50 / 60 Hz ± 10 % or 230 V AC, 50 / 60 Hz ± 10 %
Power consumption	Max. 10 W
Cabinet material	Polycarbonate, glass reinforced
Enclosure rating	IP 67, NEMA 6
Temperature range	- 20 ... 60 °C
Weight	1,1 kg
CE approvals	EN 61000-6-4:2001, EN 61000-6-2:2001

Display Unit	
Enclosure rating	Dust and waterproof IP 67, NEMA 6 (when mounted on converter)
Housing material	Polycarbonate, glass reinforced
Protection lid	Transparent polycarbonate
Display	White backlit LCD-display (64 x 128 pixels) with softkeys
Indication	Indication measurement, configuration and graph
Clock	Real-time clock with built-in battery backup
Communication	MODBUS [®] RTU-mode, 9600 baud, 2-wire RS 485, master-mode
Interface	RS 485
Memory	2 Mb Flash memory, 160.000 entries with date, time and value
Interface	USB 1,1 type mini B, Female
Temperature range	- 20 ... 60 °C

Oxiss[®] Sensor	
Dissolved oxygen saturated	0 - 30.0 mg/l or ppm (parts per million) 0 - 120 %
Measurement principle	Optical, near infra-red fluorescence ($I_{in} = 475 \text{ nm}$, $I_{out} = 600 \text{ nm}$)
Sensor check	Automatic self-diagnostics
Pressure	6 bar (100 psi)
Materials	Body and Head: PU, PVC, silicone, epoxy and stainless steel 316 SS Optical lens: Sapphire O-ring: Viton Cable: PUR
Cleaning system	Built-in air or water jet Water supply: 35-50 psi (2,3 - 3,4 Bar) Air supply: 40-60 psi (2,7 - 4 Bar)
Cable	4 x 0,326 mm ² , shielded, outer diameter Ø 5.0 mm (22 AWG)
Cable length	10 m (33 ft.), can be extended up to 600 mm
Response time	t_{90} less than 1 second, t_{95} less than 60 second
Flow velocity	No flow required
Power supply	12 V DC (10 - 16 V DC), approx. 10 mA
Output	RS 485, 9600 baud, 2-wire
Accuracy	Better than 1% of actual reading (0,02 mg/l)
Resolution	Better than 0,02 mg/l
Temperature range	0 - 60 °C
Temperature compensation	0 - 50 °C
Enclosure rating	IP 68 to IEC 529 (10 m), NEMA 6
Dimensions	48.5 x 130 mm (diameter x length)
Mounting	1,5 inch NPT thread 0,25 inch NPT thread for jet spray cleaning tube
Weight	0,77 kg (1.7 lbs)
Approvals	EN 61000-6-4:2001, EN 61000-6-2:2001

Order Numbers

Oxix[®] Converters	
206304	Oxix [®] Converter w/ display, 10 - 30 V DC
206305	Oxix [®] Converter w/ display, 230 / 115 V AC
206306	Oxix [®] Converter w/ display, 24 V AC
206307	Oxix [®] Converter without display, 10 - 30 V DC
206308	Oxix [®] Converter without display, 230 / 115 V AC
206309	Oxix [®] Converter without display, 24 V AC

Oxix[®] Sensor	
206510	Oxix [®] Sensor

Accessories for Oxix[®] Sensors	
155230	Oxix [®] Insertion adapter, 1½" NPT inner thread -> 2" RG outer thread
155236	Oxix [®] Immersion fitting
691120	Cable for Oxix [®] sensor (PUR)
155216	1½" NPT to 1¼" RG Adapter

This page intentionally left blank.

4. Sensor Installation

WARNING!

The Oxix[®] transmitter must not be powered until the transmitter is correctly mounted and connected!

WARNING!

Connections to the Oxix[®] transmitter must not be disconnected while the transmitter is powered.

Important!

To ensure safe and optimal functionality of the Oxix[®] transmitter, the instructions below must be followed closely.

- The sensor must be mounted in a location where it is possible to perform a representative dissolved oxygen sat. measurement.
- Fittings and mountings must be capable of carrying the sensor's weight (0,77 kg / 1.7 lbs), and vibrations from for example pumps and other equipment must be avoided.
- The system should be installed to facilitate access to the Oxix[®] transmitter operator panel and sensor without risking personal injury during normal operation, maintenance, cleaning of sensor, etc.
- The Oxix[®] transmitter must be connected to a mains outlet that complies with national and local regulations.
- All cables must be installed, connected and mounted to minimize mechanical impact and electrical influence from other installations.
- The sensor cable's maximum tensile load is adjusted to the sensor weight.
- The sensor is a electro-mechanical instrument. Be careful not to damage the sensor lens. The accuracy will deteriorate if foreign material accumulates on it, or it is subject to abrasive cleaning procedures. Only use a soft cloth for cleaning. NEVER EVER a steel brush!
- All fuses are located on the Oxix[®] converter's motherboard.

Physical Sensor Installation

Preparation

Select a position that can produce a valid and representative measuring value and provide sufficient space for physical cleaning of the sensor on a regular basis.

Positioning the Sensor

The positioning of the sensor is very application dependant. There are, however, some "do"s and "don't"s that can be used as guidelines.

Do

- In aeration tanks or basins with significant fluctuation in depth the sensor should be mounted on a floating device that keeps the sensor submerged to a fixed depth from the surface.
- In tanks or basins with no or little fluctuation in depth the sensor may be mounted in a fixed position approximately 1/4 below the surface.
- The optimal position at installations in flow-through aeration basins with one measuring point is near the tank inlet.
- The optimal positions at installations in flow-through aeration basins with two measuring points are near the tank inlet and the tank outlet.

Don't

- Do not position the sensor at or very close to the surface. Strong wind aeration leads to increased dissolved oxygen concentration in the surface layer which may not be representative.
- Do not use a fixed sensor position in aeration tanks/basins with significant depth fluctuations. The dissolved oxygen saturation varies with the depth.

5. Sensor Calibration

The Oxix[®] sensor is factory calibrated. No further calibration is required.

Zero-point Calibration Check

A zero-point calibration check may be carried out as described below.

Required materials

- 1 bucket
- 1 measuring cup
- 1 tablespoon
- Sodium sulfite (Na_2SO_3)

Procedure

1. Dissolve 3 tablespoons of sodium sulfite (Na_2SO_3) in a bucket (or open container) containing 4 liters of clean tap water (1 US gallon, 0.9 UK gallon).
2. Stir for about 1 minute.
3. Lower the sensor into the solution and let it rest at least half an hour.
4. Make sure that the sensor's measuring element is facing down, and no air bubbles stick to the lense.
5. Check that the the Oxix[®] readout is zero.

2-point Calibration

2-point calibration is normally not required and is not recommended.

For very special applications it is possible to perform a 2-point calibration of the Oxix[®] transmitter. If required, contact an MJK sales or service representative for further details.

This page intentionally left blank.


6. Converter

Electrical Mounting

Warning!

The Oxix[®] converter/display unit must not be mounted in explosion hazardous areas!

Loosen the four screws (positions indicated by arrows) and remove the display unit to gain access to the terminals.

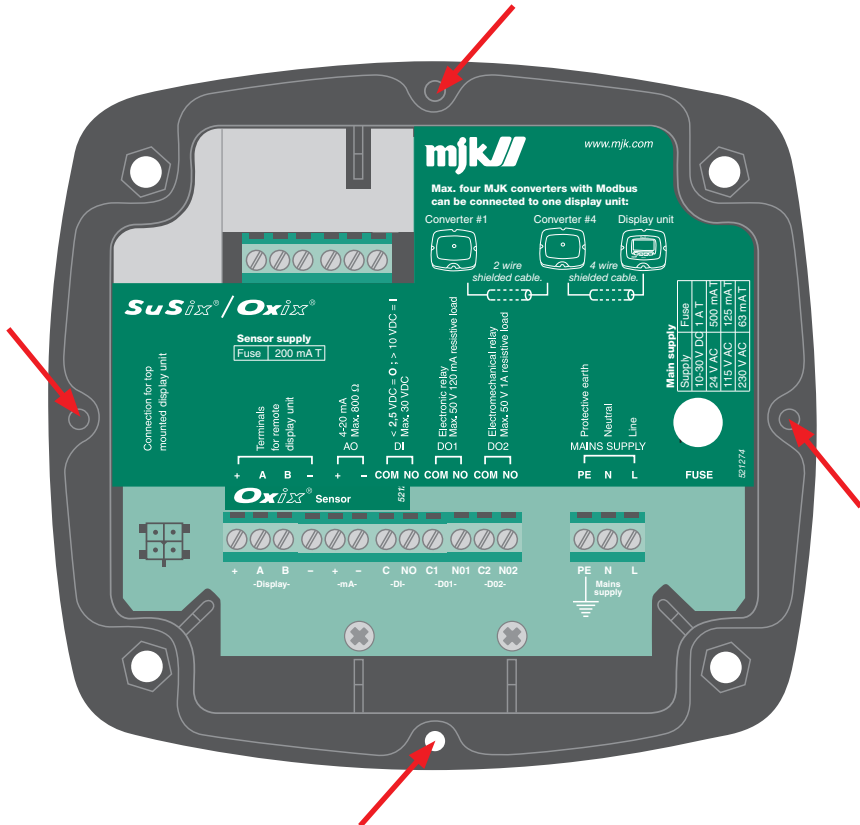

Power Supply

The flow converter must be supplied from a properly fused mains outlet, a 24 volt AC outlet, or a 10 - 30 V DC power supply/battery.

Power Supply 230 V AC, 115 V AC or 24 V AC	
Terminal	Designation
PE	Protective ground
N	230 / 115 / 24 V AC neutral
L	230 / 115 / 24 V AC live

Power Supply 10 - 30 V DC	
Terminal	Designation
PE	Protective ground
—	DC neutral
+	DC live

The internal fuse ratings are:

Internal Fuse Ratings			
Voltage	Rating	Order no.	Dimension
230 V AC	0.063 mA T	550030	5 x 20 mm
115 V AC	0.125 mA T	550035	5 x 20 mm
24 V AC	0.5 mA T	550049	5 x 20 mm
10 - 30 V DC	1.0 AT	550051	5 x 20 mm

The technical specifications for a 10 - 30 V DC power supply/battery are:

Technical Specifications for 10 - 30 V DC Power Supply	
Power consumption without display	< 5 W
Power consumption with display	< 8 W
Peak start current @12 V DC, 1 second	Approx. 1,5 A
Peak start current @24 V DC, 1 second	Approx. 1 A

Display Connector


The display wires (and the remote display extension cable) are colour coded as follows:

Display Connector	
Wire colour	Designation
Red	+ supply
White	RS-485 A
Grey	RS-485 B
Black	- supply

Changing the Power Supply Voltage 230/115 V AC

To change the input mains voltage from 230 V AC to 115 V AC (or vice versa) proceed as follows:


1. Loosen the four screws on the front and lift out the display (see also page 23).
2. Note down the color and position of the wires in the terminal blocks, and then loosen the terminal screws.
3. Unscrew the two screws that hold the metal cover and then remove it.
4. Unscrew the four screws that hold the mother PCB (the printed circuit board with all the electrical components).
5. Remove the mother PCB and look at the back side.
This is what you should expect to see for a 230 V AC configuration:

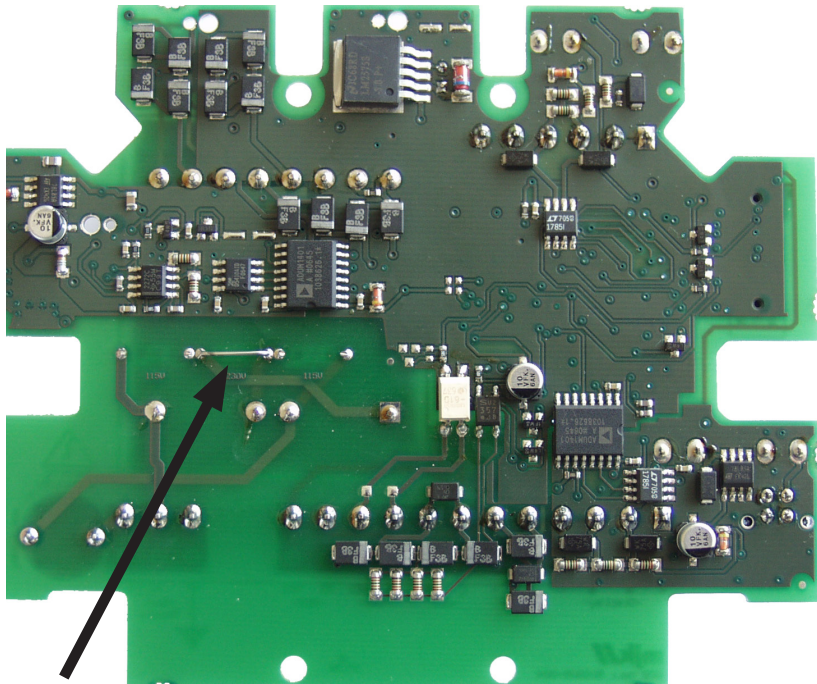

230 V AC single jumper position

6. Unsolder and remove the jumper indicated by the arrow.

7. See on the following picture where two jumpers must be inserted for a 115 V AC configuration:

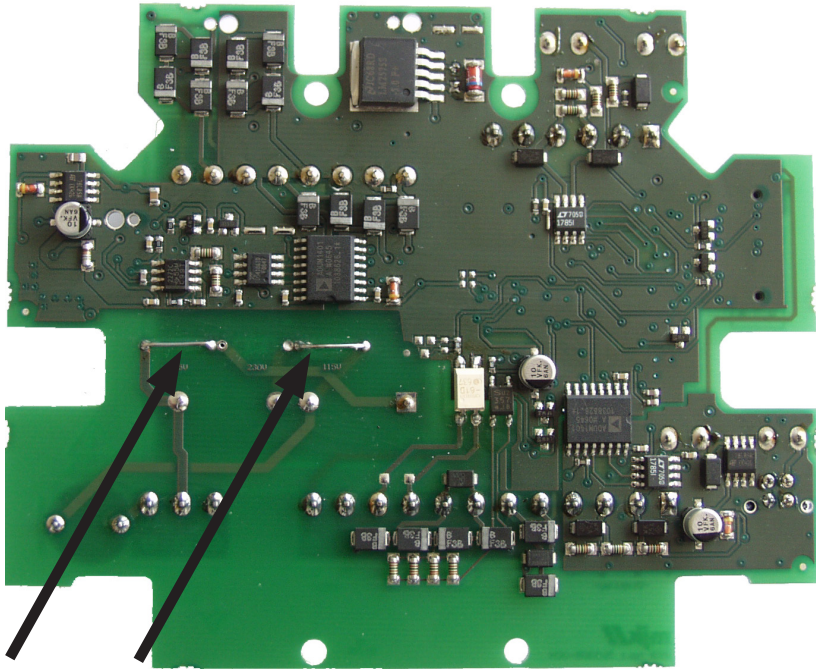

115 V AC dual jumper positions

8. Insert and solder 2 jumpers (wires) in the positions indicated by the black arrows.
9. Turn around the PCB and replace the 63 mA fuse on the right side with a 125 mA fuse (or vice versa going from 115 VAC to 230 VAC).
10. Re-insert the PCB and re-assemble the converter (see also steps 4, 3, 2 and 1).

Analogue Output

The analogue output is an active output with a maximum load of 800Ω.

Analogue Output		
Terminal		Designation
AO	+	4-20 mA
AO	-	4-20 mA

The analogue output can be programmed for indication of primary units. See details on page [53](#).

Digital Output

Oxiss[®] has two digital outputs - DO1 with an opto (light triggered) relay and DO2 with an electro-mechanical relay.

They can both be programmed for the following functions:

- Sensor error
- High and low alarms

Opto Relay		
Terminal		Designation
DO1	Com	Max. 50 V DC /120 mA
DO1	NO	

Electro-mechanical relay		
Terminal		Designation
DO2	Com	Max. 50 V DC /1 A
DO2	NO	

DO1 shares the common terminal (Com) with DI.

See also application examples in Appendix E. Digital Input/Output Connections on page [101](#).

Digital Input

Oxix[®] has one digital input which can be activated with a voltage higher than 10 V DC and de-activated with a voltage lower than 5 V DC.


Digital Input		
Terminal		Designation
DI	Com	
DI		Max. 30 V DC

The digital input (DI) can be programmed for the following functions:

- start and pause cleaning function
- Solid curve

See also application examples in Appendix E. Digital Input/Output Connections on page [101](#).

Converter Terminals

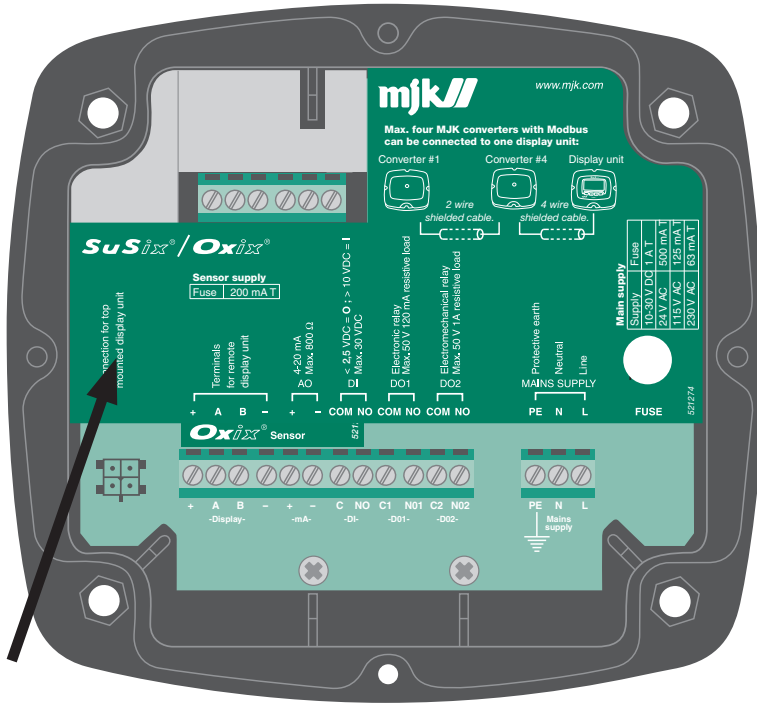

Oxix[®] converter terminals


Flip the green label with "SuSix[®] / Oxix[®]" printed on it (see arrow) to the right to gain access to the sensor connection terminals (see next page).

Sensor and Mounting Kit / Connection Board Terminals

Important!: Make sure the right wiring indication label is fitted below the terminal block (label indicated by arrow). The label must clearly be marked Oxix®.

Wrong wiring may cause sensor destruction !

Connect the sensor wires to the Oxix® converter with the wires coming from the sensor as shown below (see arrow).

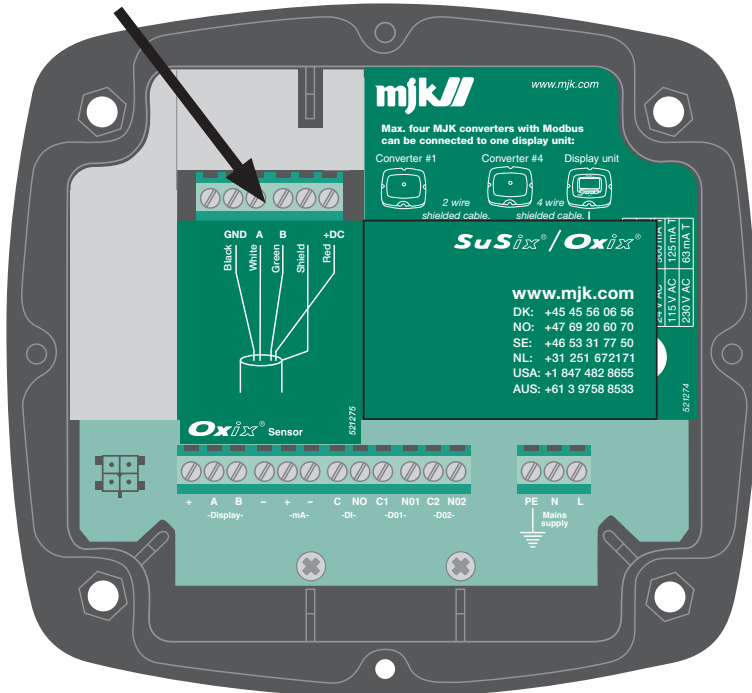


Oxix® converter terminals

Terminals	
Wires from sensor	Converter terminals
-	not used
Black	GND
White	A
Green	B
Shield	- (shield GND)
Red	+DC


7. System Configuration Examples

MJK Oxix[®] transmitters share communication protocols with other MJK products like the MJK Magflux[®] flow meter and the MJK Connect data transmitter, and can also share display units. This section illustrates two configuration examples and includes cable connections and part numbers.

Magflux[®] with blind lid and Oxix[®] with display unit

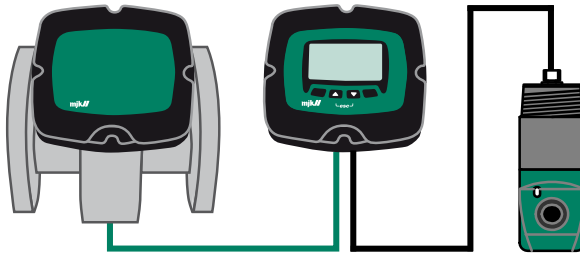


Oxix[®] with blind lid, Magflux[®] with blind lid and a remote display unit

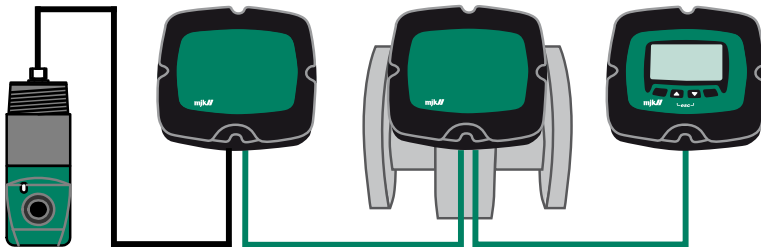

Magflux[®] with Blind Lid and Oxix[®] with Display Unit

Configuration: Magflux[®] flow sensor/converter with a blind lid connected to a Oxix[®] transmitter with display unit

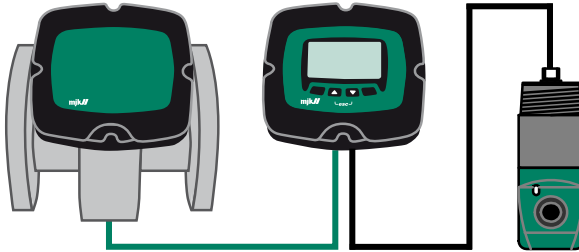

Part numbers for this configuration:

- 2x7xxx **MagFlux[®]** Flow Sensor
- 2x7791x **MagFlux[®]** Converter with blind lid
- 579035 **MagFlux[®]** Gel Potting Kit IP68
- 2-wire, shielded, twisted cable (Magflux[®] <--> Oxix[®])
- 206510 **Oxix[®]** Sensor
- 206304-6 **SuSix[®] /Oxix[®]** Converter with Display Unit


Wiring Schematic #1

for "Magflux[®] with Blind Lid and Oxix[®] with Display Unit" from the opposite page (page 32).

Oxix[®] with Display Unit

2-wire, shielded twisted cable

1. Connect lead "1" to slot "Display A"
2. Connect lead "2" to slot "Display B"
3. Connect the twisted shield to slot "Display -"

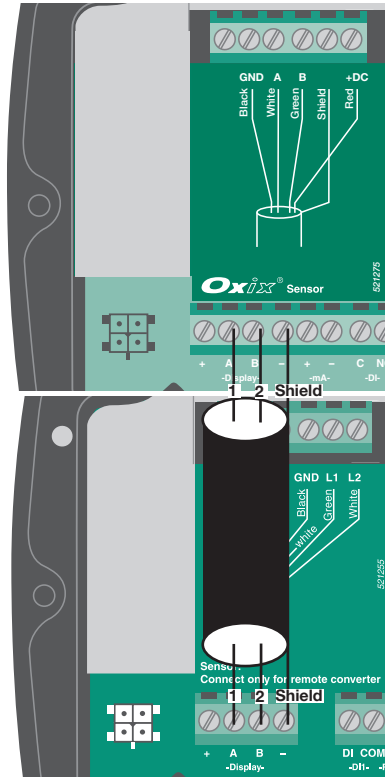


Magflux[®] with Blind Lid

2-wire, shielded twisted cable

1. Connect lead "1" to slot "Display A"
2. Connect lead "2" to slot "Display B"
3. Connect the twisted shield to slot "Display -"

SuSix[®] with Blind Lid, Magflux[®] with Blind Lid and a Remote Display

Configuration: An Oxix[®] transmitter with a blind lid connected to a Magflux[®] flow sensor with a blind lid and common remote Display Unit.

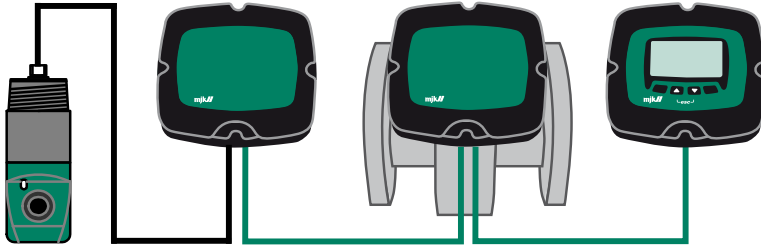

Part numbers for this configuration:

- 206510 **Oxix[®]** Sensor
- 206304-6 **SuSix[®] / Oxix[®]** Converter
- 2x7xxx **MagFlux[®]** Flow Sensor
- 2x791x **MagFlux[®]** Converter with blind lid
- 579035 **MagFlux[®]** Gel Potting Kit IP68
- 207930 Wall Mounting Kit
- 2-wire, twisted shield cable (Oxix[®] <--> Magflux[®])
- 4-wire, twisted shield cable (Magflux[®] <--> Display Unit)

Wiring Schematic #2

for "Oxix[®] with Blind Lid and a Magflux[®] with Blind Lid connected to a common wall mounted Display Unit" on the opposite page (page 34).

Oxix[®] with Blind Lid

2-wire, shielded twisted cable

1. Connect lead "1" to slot "Display A"
2. Connect lead "2" to slot "Display B"
3. Connect the twisted shield to slot "Display -"

Magflux[®] with Blind Lid

2-wire, shielded twisted cable

1. Connect lead "1" to slot "Display A"
2. Connect lead "2" to slot "Display B"
3. Connect the twisted shield to slot "Display -".


4-wire, shielded twisted cable

1. Connect lead "1" to slot "Display +"
2. Connect lead "2" to slot "Display A"
3. Connect lead "3" to slot "Display B"
4. Connect the twisted shield to slot "Display -".

Wall Mounted Display Unit

4-wire, shielded twisted cable

1. Connect lead "1" to slot "Display +"
2. Connect lead "2" to slot "Display A"
3. Connect lead "3" to slot "Display B"
4. Connect the twisted shield to slot "Display -".

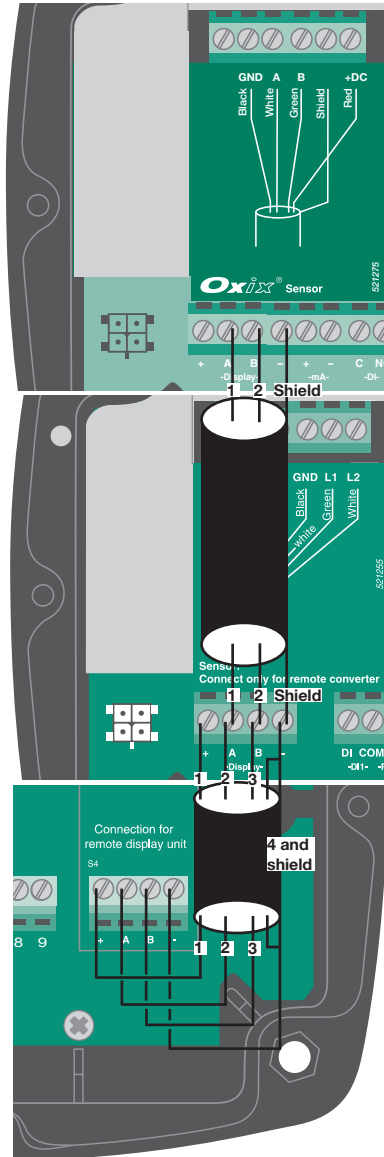

This page intentionally left blank.

8. Startup

Initial Checks before Power-up

Before switching on power the following steps must be checked.

1. The local mains power supply voltage corresponds to the voltage printed on the identification label of the transmitter.
2. All electrical connections are made in accordance with the electrical connection diagram shown with special emphasis on the sensor connection described on page [30](#).
3. All terminal screws are tightened.
4. All cable glands are tightly secured.

Initial Power-up

1. Turn on power.
2. Within 60 seconds the Oxix[®] sensor will be found by the automatic sensor detection program. During this process you might briefly see "SuSix1" and/or "MagFlux1" on the display. This is normal and to be expected.

Initial Measurement

1. Make sure that the sensor is completely covered by liquid.
2. Turn on power to the transmitter and wait 15 minutes before taking the initial measurement.

Language Selection

1. The default display language is English. If another language is required, proceed with step 2.
2. Select "Display Setup" from the Main Menu.
3. Select "Language" from the Display Setup menu and chose the required language (see page [73](#)).

Display Read-out, one connected unit


All **Oxix[®]** display read-outs are illustrated and described in this manual.

Chapter 6. Oxix[®] Menu (on page 41) gives a detailed description of the 5-line LCD screen displays shown during setup, configuration and normal operation.



Display and keyboard for reading and programming

The display shown above will in the remaining part of this manual be stylized to appear like this:

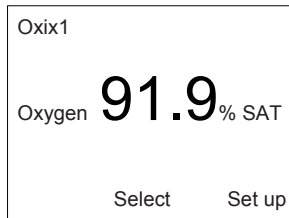

Display Read-out, several connected units

When several MJK units are interconnected, for example an Oxix[®] dissolved oxygen transmitter and a SuSix[®] turbidity and suspended solids transmitter with different names and Modbus ID numbers, a "Display Overview Menu" is available at top level (press "Back" repeatedly):

Oxix1	91.9 %
Susix1	578 mg/L
Back	Select Display

All connected units are displayed and sorted by their ID numbers, and consequently each unit can be selected and set up as required:

Oxix1
Oxygen 91.9 % SAT
Select Set up

or

SuSix1	[X]
Prim. 578 mg/l	
Second 0.1%	
Select Setup	

Important:

More connected units can only be managed as described above, if each unit have been assigned a unique name and Modbus ID number. See page 75 for details.

Display Keys

The keys and the soft keys (variable key functions determined by the display firmware) are used for initial programming and normal operation of the flow meter.

The function(s) of the four available keys is displayed at the bottom of the display. The symbols and actual functions are described in detail in the sections that describe the individual menus.

Contrast Adjustment

Adjust the display contrast by pressing the two outmost keys simultaneously (indicated by the keys) and press the up/down keys as required.



Save the new setting by pressing the two outmost keys simultaneously.

System Reset

You can reset and refresh all system displays and key combinations by pressing all four keys simultaneously. It is a so-called coldboot, where all displays are refreshed and all settings/configurations are kept with only one exception: the language setting.

This feature is especially useful during for example a service call, where the display language (Dutch, Danish, Swedish etc.) cannot be understood by the local serviceperson. A system reset immediately sets the display language to (GB) English.

The system reset must not be confused with the ultimate "Recover factory settings" (see page 60) which deletes all local configurations/settings and replaces them with default factory settings.

9. Oxix[®] Menus


All the **Oxix[®]** menus and sub menus are shown and described in the following sections.

Continuous overviews of the menu and sub-menu structures are presented at the end of this manual:

- **Converter Overview Menu** (page 102)
- **Main Menu Overview** (page 102)
- **Converter Setup Overview** (page 106)
- **Service Menu Overview** (page 114)
- **Display Setup Menu Overview** (page 120)


Converter Overview Menu

1. Press the "Setup" key on the **Oxix[®]** display (see below) to enter the **Oxix[®]** Converter Overview Menu.

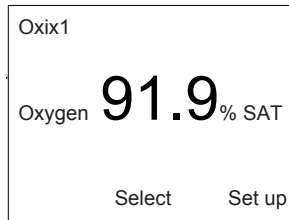


Main Menu

2. Press the up/down keys to highlight the required menu line in the Main Menu (here: Specify main screen) and then press OK to select it.

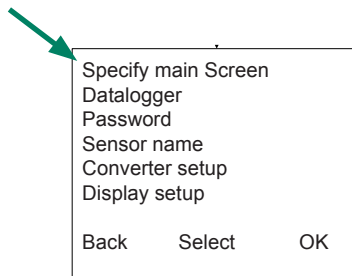

Specify Main Screen

The "Specify Main Screen" menu allows you to customize the **Oxix[®]** display to suit your requirements. You can add and remove five available display lines and name/configure them individually.

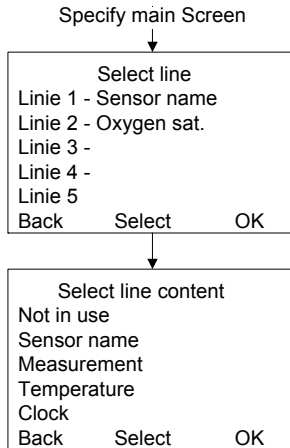

1. Press the up/down keys to highlight the required menu line and then press OK to select it.
2. Press the up/down keys to highlight the required option and press OK.

The available options are:

Not in use

The line not used. The freed space will be used by the other lines.

Sensor name

TBD

Measurement

Measurement displays the measured values in time in the predefined unit: %, mg/l or ppm.

Note: The units are defined later on in the "Converter setup/Units" menu on page [52](#).

Temperature

The temperature may be displayed in degrees Celcius (°C) or in degrees Fahrenheit (°F). See also page [52](#).

Clock

Time and date


The size of the display lines will automatically increase or decrease as the number of display lines is removed or added to maximize the field of view for the measured values

Datalogger


Oxix[®] provides a data logger with a capacity of approx. 20,000 entry points. See Appendix D on page 97 for examples and descriptions of log files.

The data logger operates after the FIFO principle (First In, First Out). If the data logger is full and new data are coming in, the oldest data are discarded.

1. Press the up/down keys to highlight the required menu line (here: Datalogger) and then press OK to select it.

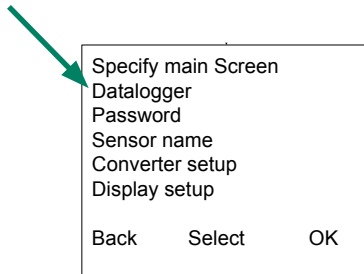

2. Press the up/down keys to change the highlighted digit, and then press the right-key (>) to proceed to the next digit.

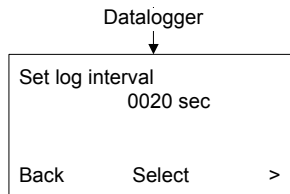

3. Continue until all digits have been set and press OK.
The log interval can be set in intervals from 10 seconds up to 9999 seconds.

The data log contains:

- Date
- Time
- Dissolved oxygen values

In case of a power failure, the data logger continues when power returns.

If more converters are connected to one Display Unit, each converter has its own individual log interval and can be sorted.

All converters share the same memory of 20.000 entry points.


The log data can be shown on the Display Unit or be stored in an external CSV file. MJK-Field Link software is needed for transfer of data into CSV file format via the USB port in the display unit. The format can be read in for example Microsoft[®] Excel[®] (see Appendix D on page 97 for details).

An example of the log capacity of one sensor versus the time interval is shown in the following table.


Log interval		Log capacity	
Seconds	Minutes	Hours	Days
10	-	55,56	2,31
30	-	166,67	6,94
-	1	333	14
-	5	1667	69
-	10	3333	139
-	30	10000	417
-	60	20000	833

Graph Display

The content of the Data Logger can be displayed on the Display Unit by pressing the up/down keys, highlighting "Oxygen sat." and selecting "Graph"

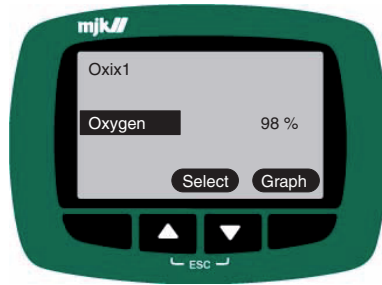

The Display Unit then shows the Graph screen. To return to the Main Menu display screen, select "esc" by pressing the up/down keys simultaneously.

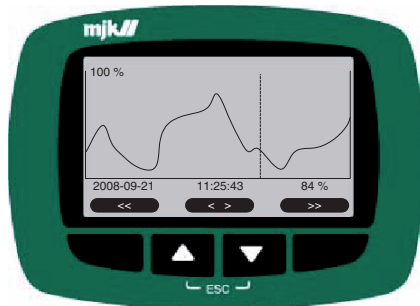

The Y axis is automatically scaled according to the maximum value of the mA output.

Double-arrow keys jump forward and backward one screen frame at a time.


Single-arrow keys move the cursor forward and backward on the screen.

The actual values at the cursor position is shown at the bottom of the screen.


Password

A password provides (and prevents) access to all the settings in the Display and Converter unit. The code consists of a numeric 5-digit code between 0 and 65535. If your current password is lost or forgotten, contact MJK for instructions.

1. Press the up/down keys to highlight the required menu line (here: Password) and then press OK to select it.

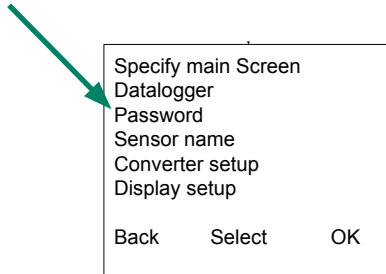

2. Press the up/down keys to highlight the required option and then press OK to select it.

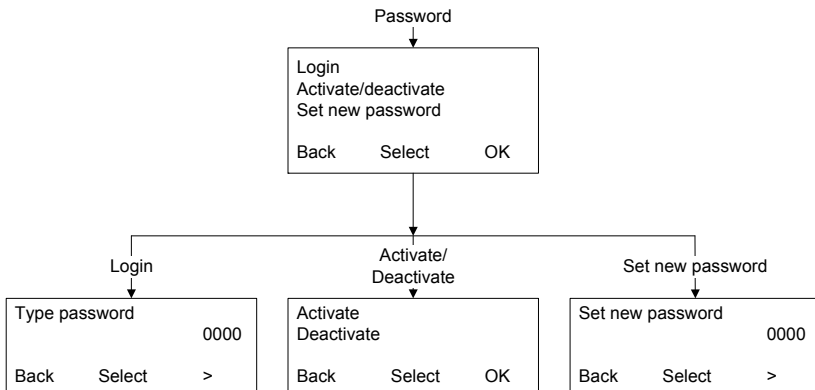

The available options are:

Login

Use the up/down keys to set the digits one by one. Continue with > until all digits have been set and then press OK.

Activate/deactivate

Write protection. Selecting "Activate" means that a password must be entered to change vital settings. "Deactivate" disables password protection. If your current password is lost or forgotten, the password protection can be overruled with the code "01750".

Change password


The present 5-digit password can be changed as required.

Sensor Name


A unique name and/or number, a function or a location can be assigned for a sensor (here: "Oxix1"). It is consequently shown on the main display with up to 4 display lines.



1. Press the up/down keys to highlight the required menu line (here: Sensor Name) and then press OK to select it.

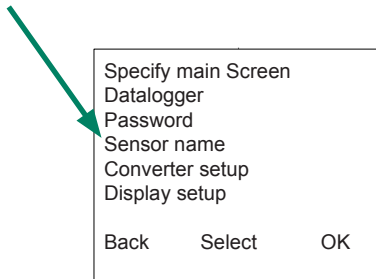

2. To change the default sensor name "Oxix1" to for example "Aeration Tank Inlet", press the left/right keys to highlight the wanted character.

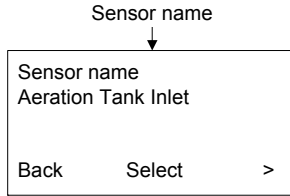

3. Press the up/down keys to change the highlighted character and then press > to proceed to the next character.
4. Continue with > until all numeric and alphabetical characters have been set.
5. Press OK.


The available characters depend on the chosen language. English, for example, provides the following character set:

a b c d e f g h i j k l m n o p q r s t u v w x y z A B C D E F G H I J K L M N O
P Q R S T U V W X Y Z <space> 1 2 3 4 5 6 7 8 9 and 0.


Converter Setup

"Converter setup" provides configuration options for calibration, alarms, units, etc. See detailed descriptions in the following sections, and a continuous overview on page 106 at the end of this manual.

1. Press the up/down keys to highlight the required menu line (here: Converter setup) and then press OK to select it.

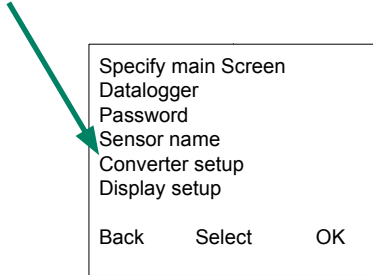


2. A number of options appears beginning with "Averaging":

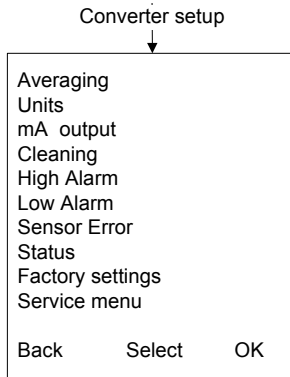


Averaging

To avoid unwanted fluctuations in the measurement reading, the "Averaging" options smooths the measurements over a predefined period of time.

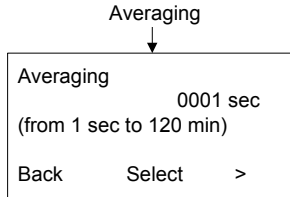

Units

The measuring and temperature units can be set from this menu.

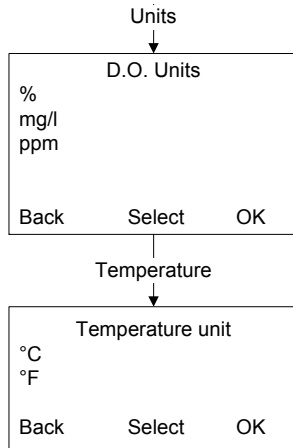


mA Output

When a **Oxix**® is connected to a power supply for the first time, the mA output is automatically set to provide 4 mA at zero and 20 mA at the theoretical maximum value.

Changes in the mA setting will not affect the relay output settings.

Note: Both values can be set in the range 10 % to 120 %, making it possible to increase or decrease the mA signal.

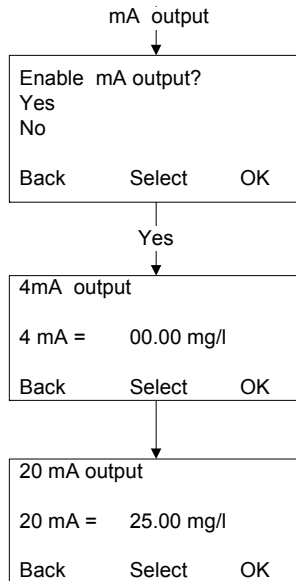

The mA output is an active output, and the maximum load is 800 Ohm.

The upper limit for the mA output is 20,5 mA


3,75 mA indicates the mA output is not in use

3,5 mA indicates values under 4 mA level

20,5 mA indicates value higher than 20 mA level.

Cleaning


Air or water jet cleaning can be defined based on local conditions.

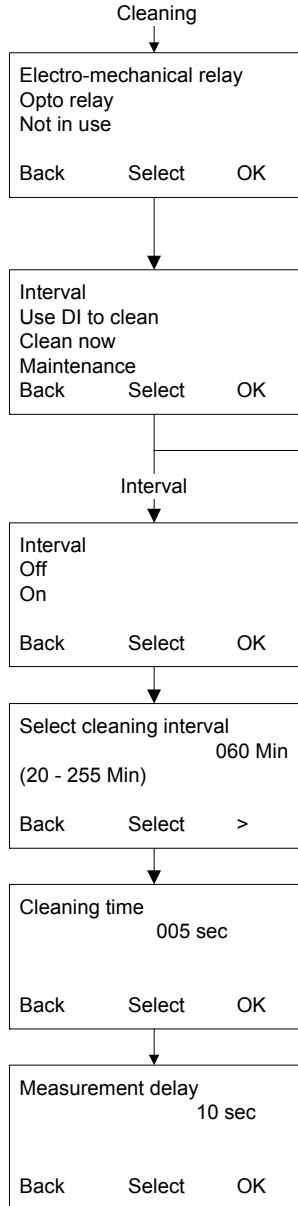

A typical cleaning interval for aeration basins would be 2 hours (120 minutes). In colder climates, condensation may form and then freeze in the tubing. This can be prevented by setting the interval to 5 - 20 minutes.


The cleaning time would typically be 30 seconds.

The measurement delay (recovery time) may also be used to coordinate with other processes. The delay merely freezes the last reading before cleaning begins. A typical value would be 60 seconds.

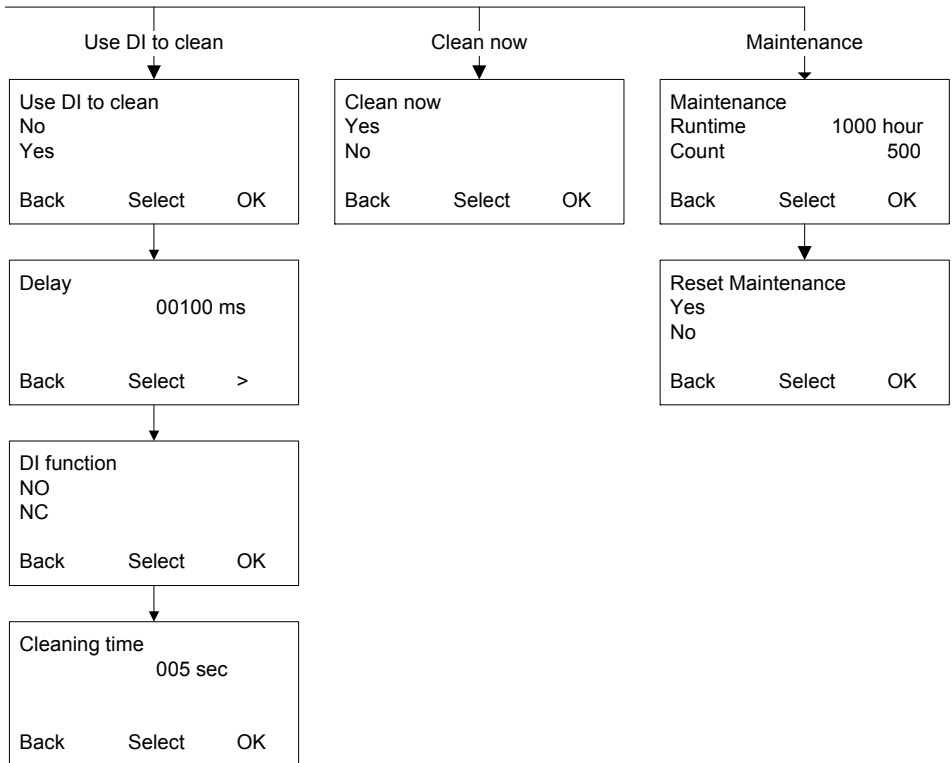


High alarm

A set point can be set to trigger an alarm (here: a high alarm) and to activate one of two relays or simply to display the alarm on the display.

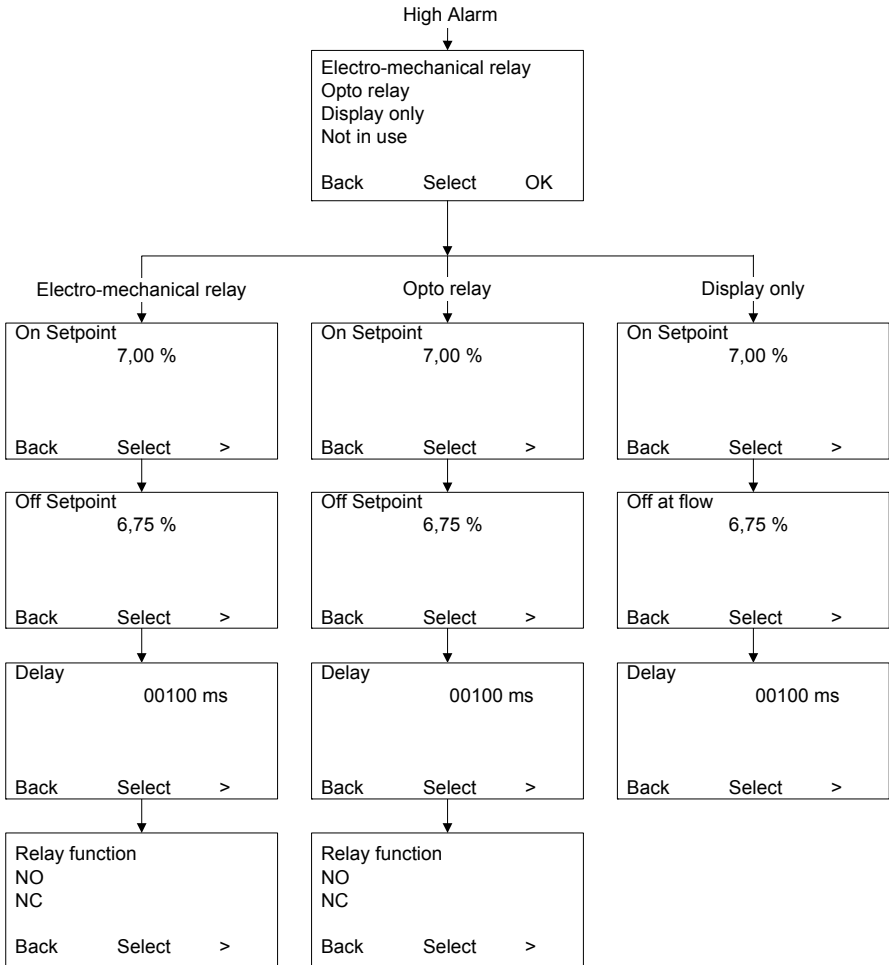


Low alarm

A set point can be set to trigger an alarm (here: a low alarm) and to activate one of two relays or simply to display the alarm on the display.

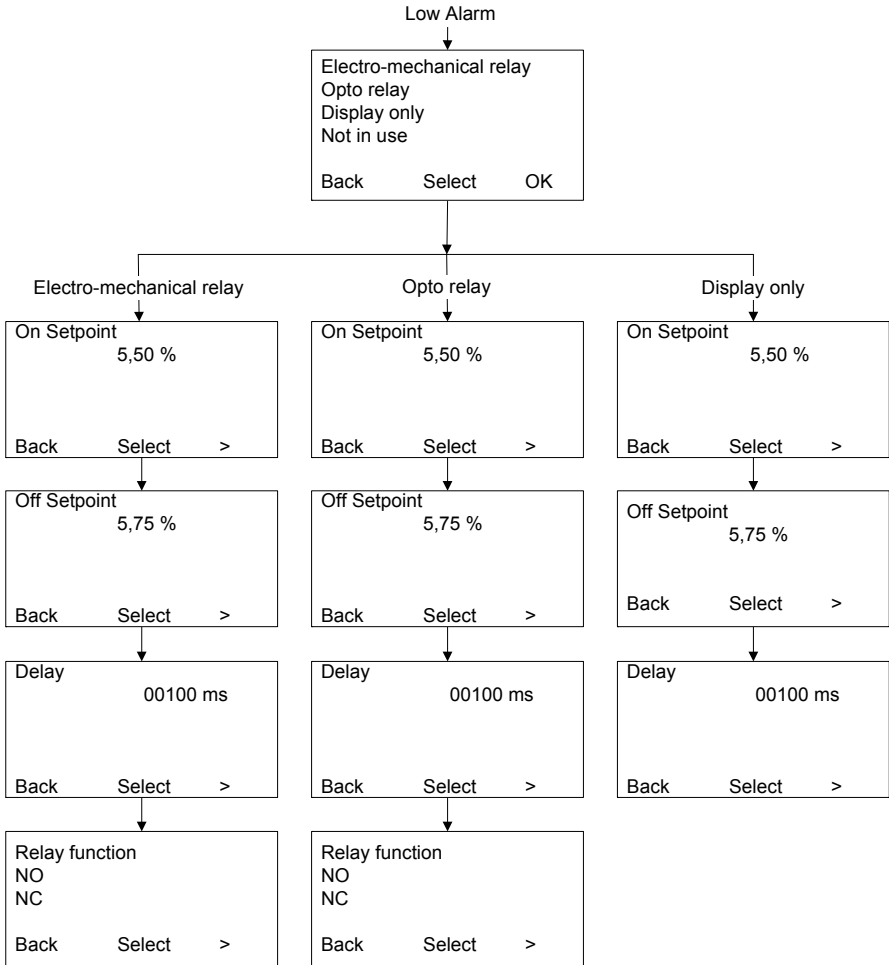


Sensor error

Oxix® has two digital outputs - DO1 with an opto (light triggered) relay and DO2 with an electro-mechanical relay. They can both be programmed for a sensor error, whenever the 4 - 20 mA range has been exceeded.

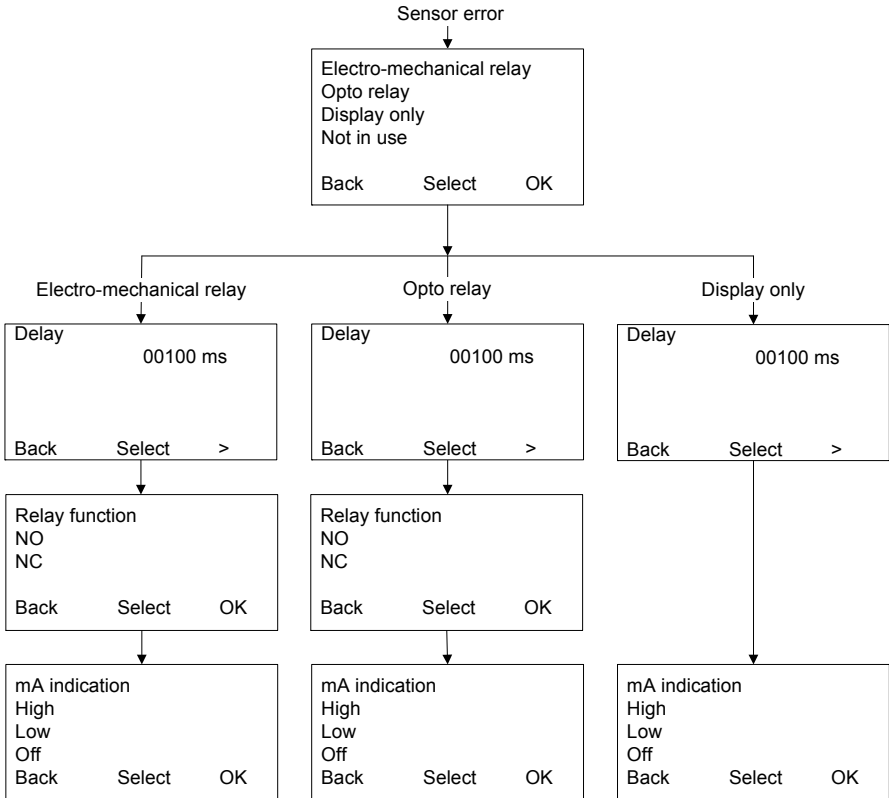

Status

The "Status" option provides an overview of the in- and output status.

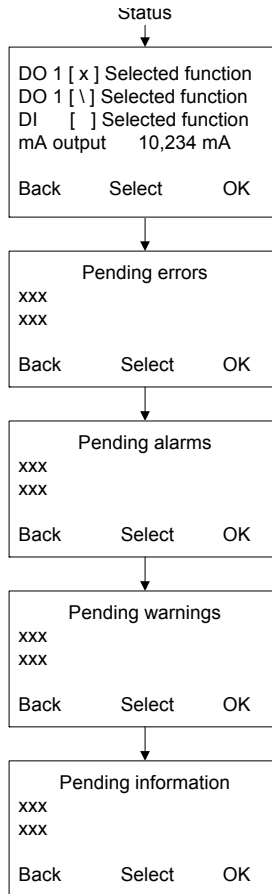

The check boxes can contain four different characters:

- X** A cross (X) in a check box indicates an active state
- /** A blinking forward slant (/) in a check box indicates that the input/output is in the process of being activated. Eventually it turns into a steady X.

- \ A blinking backward slant (\) in a check box indicates that the input/output is in the process of being de-activated. Eventually the check box is cleared.

An empty check box indicates a de-activated state.

DO 1 [X] Selected function

The selected function linked to digital output D01 is active (an "X" in the check box).

DO 2 [X] Selected function

The selected function linked to digital output D02 is in the process of being de-activated (an "X" in the check box). Digital output D02 for Totalizer Forward is activated (a ticked check box).

DI [] Selected function


The selected function linked to digital input DI de-activated (an empty check box). A "selected function" could for example be "Cleaning".

mA output 10.234 mA

The present analog output current is 10.234 mA. Pending errors, alarms, warnings and infos are displayed for the selected in- or output.


Factory settings

The "Factory settings" menu provides resetting to the original factory settings (except for the language setting).

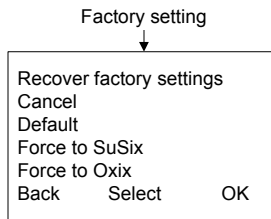

Service Menu - Digest


The "Service Menu" provides options intended for service personnel during installation, calibration, operation, monitoring and maintenance.

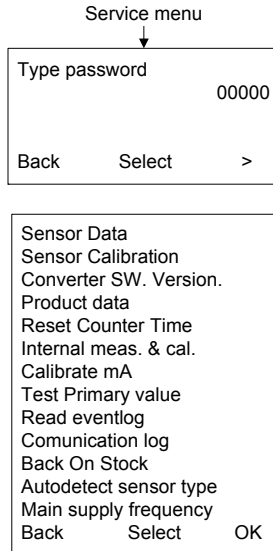


All parameters can be read without any restrictions, but certain parameters can only be changed after a password has been typed.

Service Menu - Detailed

The "Service Menu", a submenu in "Converter setup", is intended for MJK and other authorized service personnel during installation, calibration, commissioning, operation, monitoring and maintenance.

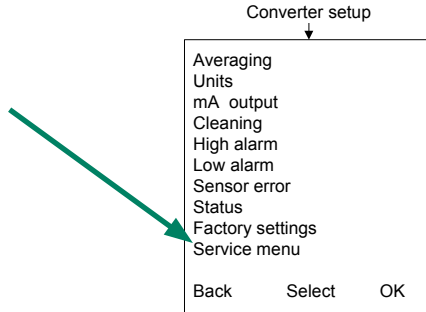


All parameters can be read without any restrictions, but certain parameters can only be changed after a password has been typed.

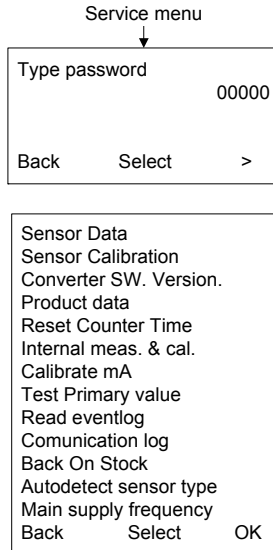


Sensor data

"Sensor data" displays the factory-assigned sensor serial number and the present sensor software version.

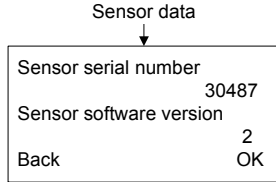

Sensor calibration

Sensor calibration is read-only. Only MJK servicepersons can access the option using the proper password.

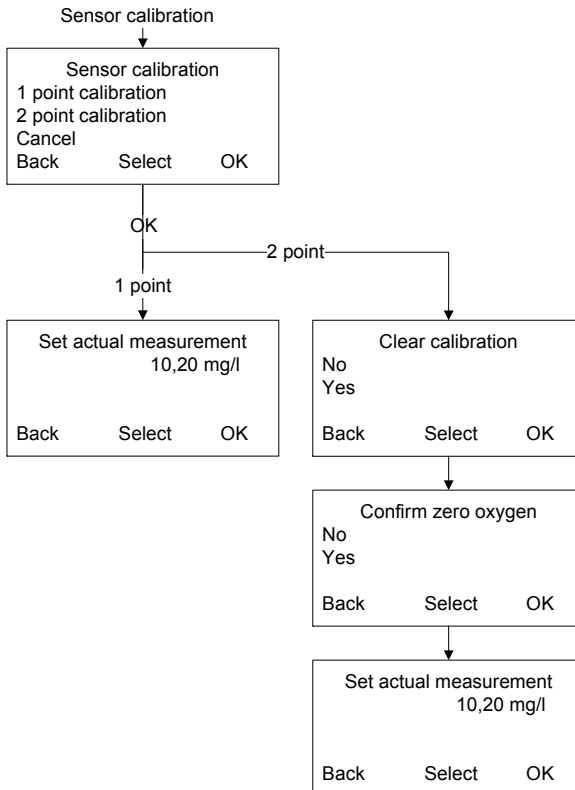

Converter SW ver.


The converter software version and the bootloader version are displayed. From that you can determine whether a software (firmware) upgrade is required or not.

Converter SW version
↓

Converter	846001-002 195
Bootload	840020-002 684
Back	


Product Data

Key product data like ID, hardware type no., track no. and HW type no. are displayed.

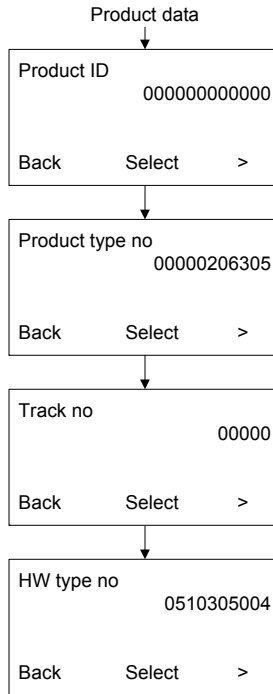


Reset Counter Time

The counter can be reset for fault finding, error correction and similar service procedures, and the actual runtime is displayed.

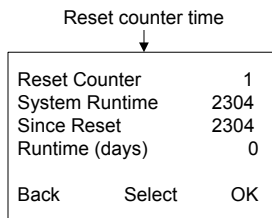


Internal Meas. & Cal.

Internal measurements and calibrations are for service personnel use only!
The supply voltage (Vcc) and the reference voltage (Vref) can be viewed and adjusted.

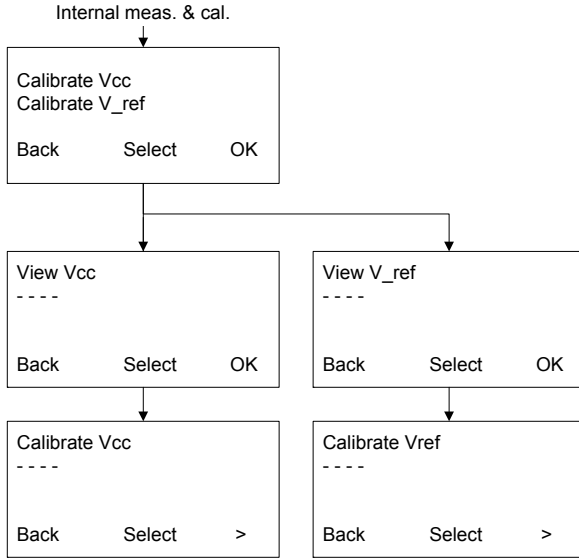


Calibrate mA

From this menu the mA reading can be calibrated against a multimeter.

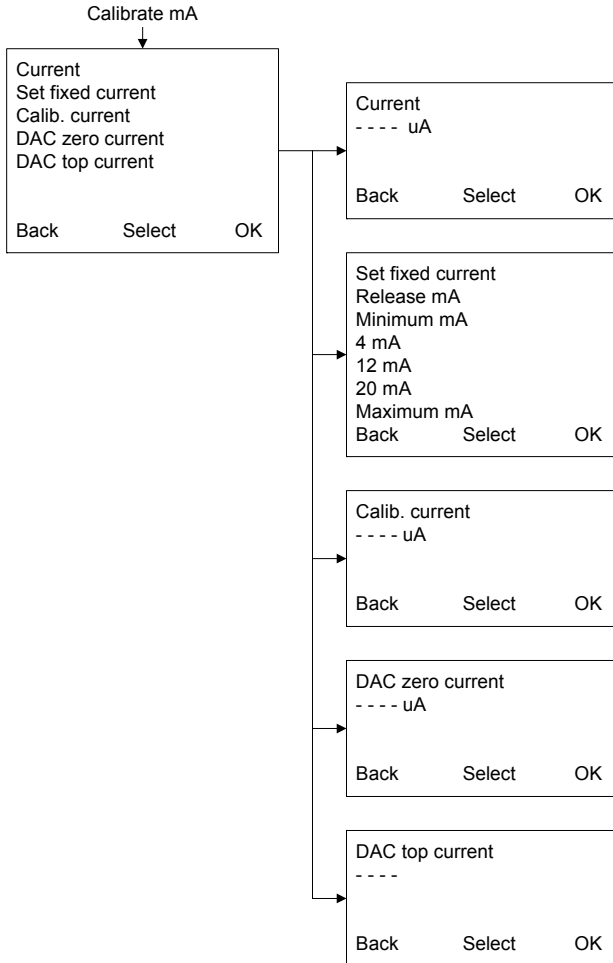


Test primary value

"Test primary value" is for MJK service personnel use only. It can be set to for example 100% to test a state or condition for a given input value.

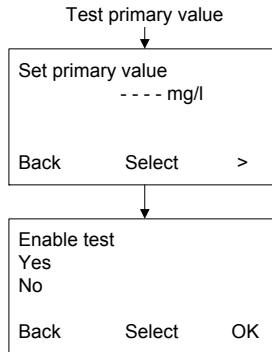


Read Eventlog

View the events within a certain time frame.

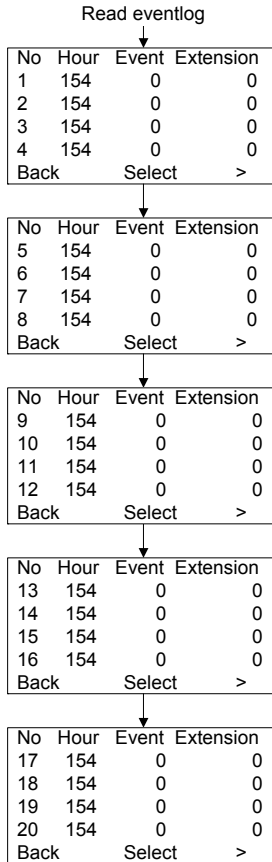


Communication log

View the Modbus and sensor communication logs. Primarily intended for fault detection.

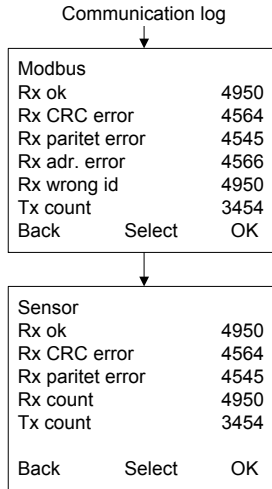


Back on stock

The factory settings can be re-established with the "Back on stock" option.

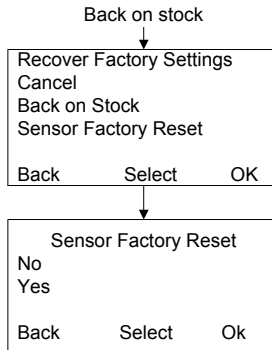


Autodetect sensor type

The option can be toggled as required. "Use" is the factory default setting.

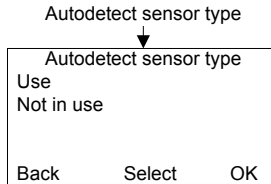

Mains supply frequency


Select the national/local mains supply frequency: 50 Hz for Europe, Africa, Asia, Australia and South America, and 60 Hz for USA, Canada, Mexico, Latin America and the Carabian.

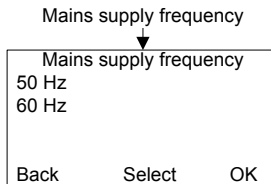


Display Setup

The "Display Setup" menu provides options for language, clock and factory settings, Modbus parameters and software version display.

1. Press the up/down keys to highlight the required menu line (here: Display setup) and then press OK to select it.

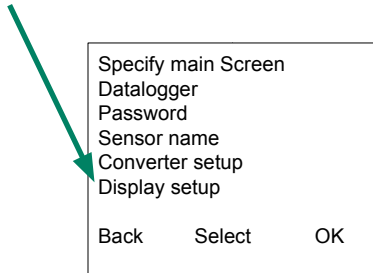

2. Press the up/down keys to highlight the required option and then press OK.

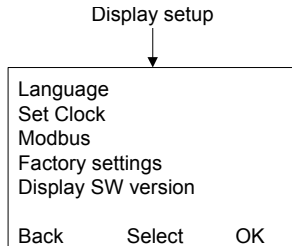

The available options are described in detail on the following pages.

Language

The Oxix[®] is installed with a language package, and (GB) English is the default language.

In the "Language" menu several national languages can be selected.




Additional languages can be added using the MJK-Field Link software program (see also page 94).

1. Chose the required language using the up/down keys up and then press OK.

Set clock


The "Set clock" menu provides setting of the built-in clock and the time format.

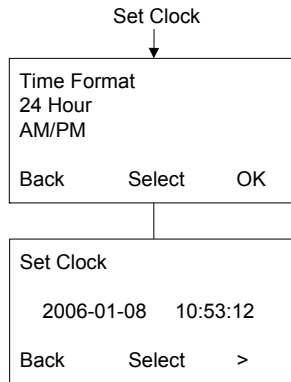

1. Select the date and time digits with the left/right keys and change the setting with the up/down keys.
2. Press OK and repeat step 1 for all remaining digits.
3. Press OK to save the time/clock settings.

Modbus

The Oxix[®] is delivered with a standard Modbus RTU protocol, and up to four Oxix[®], Connect[®] and/or MagFlux[®] units can be connected for concurrent operation.

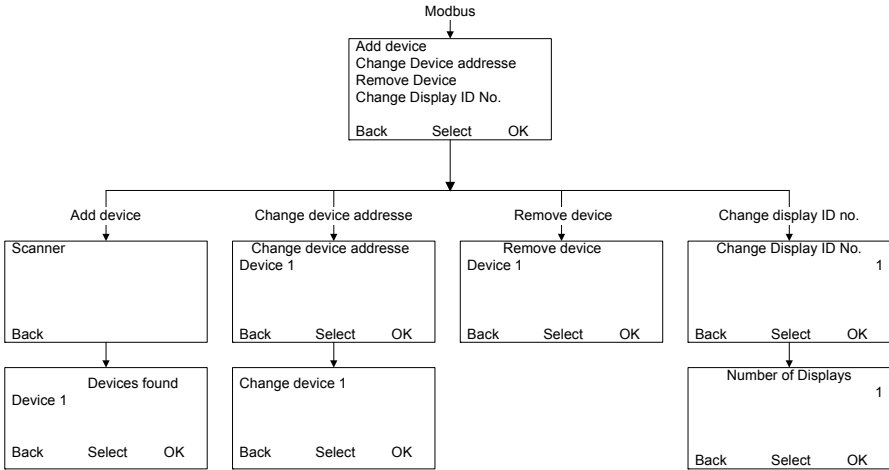

When several converters are to be added, you must change each converter's device address to a unique Modbus ID address before connecting the converter to the Display Unit.

Add device

Four Oxix[®] Converters can be connected to one Display Unit using the RS485 interface connection. Note that only one Display Unit can be used with several converters.

The Display Unit can easily be moved to another converters for readout and configuration.

1. Select "Add Device", click OK and wait for the scan process to finish.
2. The found converters are finally displayed.

Change device address

To change each converter's device address it is required that you connect the Display Unit to each converter one by one to change each converter's device address. If neglected, a conflict between the units will arise when the RS 485 serial loop is established.

Change for example "Device 1" to "Device 2" as follows:

1. Press OK and use the up/down keys to change "1" to "2".
2. Press OK.

The Oxix[®] converter ID is now changed to "2", and more converters can be added to the Display Unit with the "Add Device" option.

Remove Device

If a device is to be removed from the Display Unit, proceed as follows:

1. Select the required device with the up/down keys.
2. Click OK to remove it.


The device is now removed from the Display unit and display returns to the "Modbus" menu.

Change controller ID (display)

The display controller ID must be changed when several displays operate with the same converter(s)

Factory settings

The "Factory settings" menu provides log deletion and resetting to factory settings of the display unit.

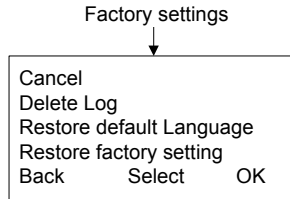


1. Press the up/down keys to highlight the required option and press OK.

Important:

The data logger will be reset, and all devices will be deleted from the display Unit. This is indicated by the MJK start-up screen which is displayed within a few seconds.

Display SW version


The "Display SW version" menu provides a read-out of the display software (actually firmware) version, the build date and last-edited date of the the multiple languages file.

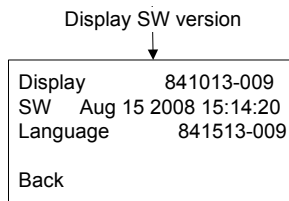




This page intentionally left blank.

10. Mechanical Dimensions


Sensor

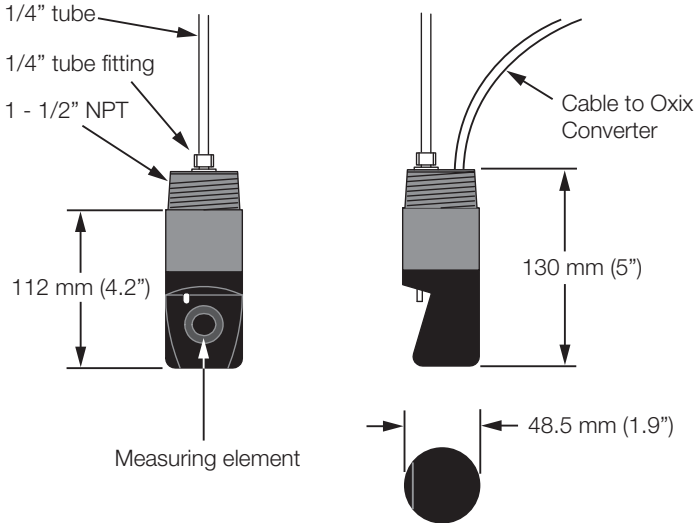

Converter and Display Unit

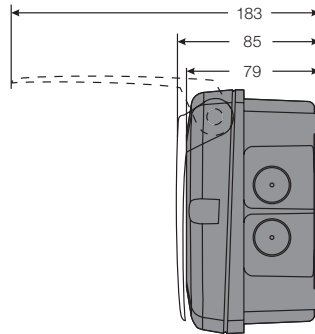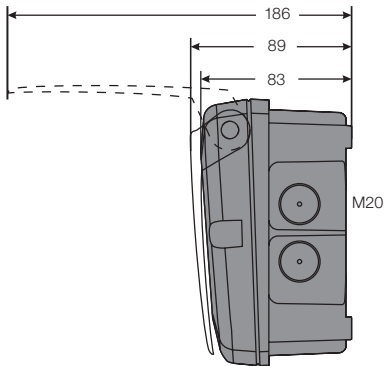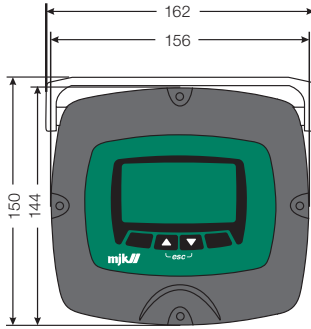

Immersion Fitting

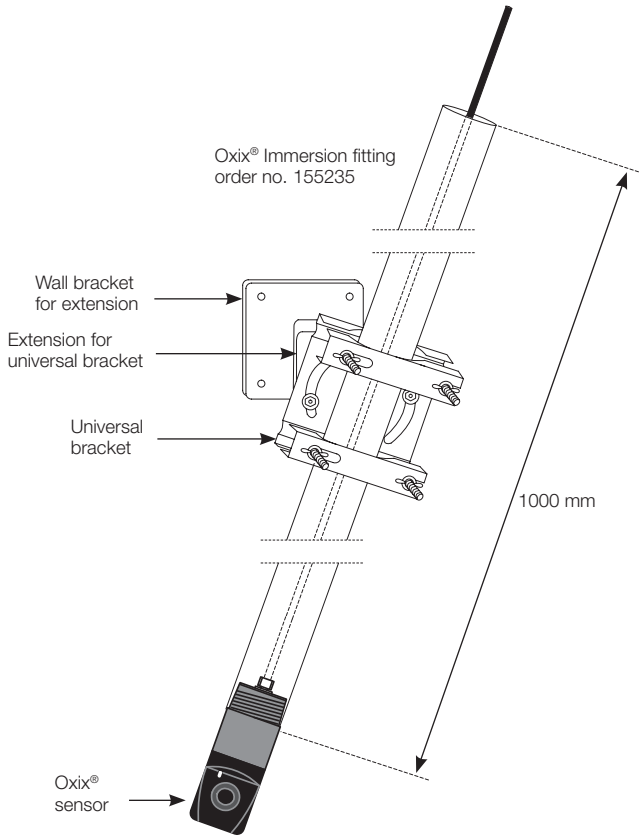

This page intentionally left blank.

11. Maintenance

The Oxix[®] sensor requires no maintenance as such. It may, however, be cleaned on a regular basis to maintain its maximum accuracy.

In very slimy environments the built-in water or air jet function may be used with advantage.

Clean the transmitter for example once a month to begin with, until an optimal cleaning interval can be determined.

Cleaning the sensor

1. Remove the Oxix[®] sensor from the liquid.
2. Clean the sensor with a soft, moist cloth and clean water. A mild detergent or dishwashing liquid may be used.

Warning: The accuracy will deteriorate, or be completely ruined at the worst, if the measuring optic element is scratched by for example the use of a steel brush during cleaning.

3. Dry the sensor with a soft cloth.
4. Immerse the Oxix[®] sensor into the liquid to be measured and leave it for at least 15 minutes to stabilize the reading.
5. The cleaning intervals may need to be shortened or extended, all depending on the usage, the liquid composition and the location.

Cleaning the converter display

When seen necessary the Oxix[®] converter display may be cleaned with a soft, moist cloth.

Functional Tests

The Oxix[®] transmitter calibration can, if wanted, be checked from the service menu option "Sensor calibration". This option is read-only. In the unlikely event that the unit fall out of calibration, an MJK serviceperson must be called to fix or re-calibrate the transmitter.

Service Contract

A service contract maintains the equipment reliability and accuracy. Get in contact with MJK's national sales and service representatives.

This page intentionally left blank.

Appendix A. Pop-up and Error Messages

Alarms	
Current overrange	Alarm - The mA connection has exceeded the 4 - 20 mA range. For example 3,5 or 20,5 mA.
Factory reset occurred	Alarm - A factory reset has occurred. Some settings have changed. Check all used settings.
High alarm	Alarm - The high set point has been detected.
Low alarm	Alarm - The low set point has been detected.
mA connection	Alarm - The mA connection is not connected. If the current-out is used, deactivate mA Current out to stop this alarm.
Errors	
Calibration	Error - 1. Perform calibration (see page 21) and/or check the units and ranges (see page 52).
Eeprom write error	Error - Eeprom write error. If error keeps popping up, contact MJK.
Measuring start failed	Error - Start failed. Try again.
Measuring timeout	Error - Timeout. Try again.
Missing adjustment	Error - The measured value has not been entered.
Not in solid mode!	Error - Calibration can only be performed when in solid mode. Change mode and try again.

Sensor	Error - General sensor error that may also be transferred to a relay output. Contact MJK.
Sensor communication	Error - Modbus communication errors normally imply that a device has been moved, added, removed or has changed status in an illegal manner. Rearranged cables or wires can also invoke this error message. Reset the system to cancel the error condition.
Sensor hardware	Error - Change the sensor hardware.
Sensor setting	Error - Some settings are wrong or have been changed.
Sensor supply	Error - The sensor supply is too low or too high. Check the sensor cable connection.
System	Error - Internal VCC error. See the event log for details.
System error	Error - The system software is inoperable including faulty alarm and sensor bits. Contact MJK.
D.O. offset	Error - A zero-point sensor problem. The sensor needs a zero-point calibration. Contact MJK.
Warnings	
Sensor range exceeded	Warning - The measured value is out of range. Check the measuring range and the measuring units.
Info	
Measurement hold	Info - The measurement is set on hold during the cleaning cycle or by an error.
Sensor needs cleaning	Info - The sensor needs cleaning.
System reset occurred	Info - The converter has been subject to a software or hardware reset.

USB	
Flash programming please wait	Programming is in progress but not finished.
Flash programming done	Programming is finished.
Flash crc error	Cyclic redundancy check error.
Unknown command flash user text	Invalid command issued.
Flash address overrun	A write error has occurred.
File phase error	Internal USB error.
File write failure	A write error has occurred.
USB protocol overrun	A communication error has occurred.

This page intentionally left blank.

Appendix B. MJK-Field Link Software

The MJK-Field Link software package provides several utilities that will be described in detail on the following pages:

- PC <-> Oxix[®] transmitter interconnection
- Saving log data
- Display firmware upgrade
- Converter firmware upgrade
- Language installation

Important Notes!


1. Current Oxix[®] log data must be saved in a file before transferring and installing new firmware. See "2. Save Log Data" overleaf.
2. Note down all display and converter settings before upgrading new firmware.
3. The upgrade procedures below must be carried out in strict alphabetical order. First procedure A, then B, C, D and finally E.

A. Connect a PC to the Oxix[®]

1. Insert the Oxix[®] MJK-Field Link CD-ROM into the PC's disk drive. The MJK-Field Link opening menu will appear after a short while (see below). If the auto-run function does not execute, locate the "MJK-Field-Link 840110-007.exe" file (or a similar file) and click "Run".




2. Unscrew the four screws that hold the Display Unit.
3. Lift out the Display Unit and connect a USB mini A/B cable to the mini USB female B connector on the rear of the front panel.
4. Connect the other end of the USB cable (max. 4.7 metres long) to the PC.
5. Select "File" in the menu bar and click "Mount USB".
If the connection is successful, a "Device Clock" window for PC and device time synchronisation is displayed (if PC and device clock were out of sync.) along with a link status display (see below).

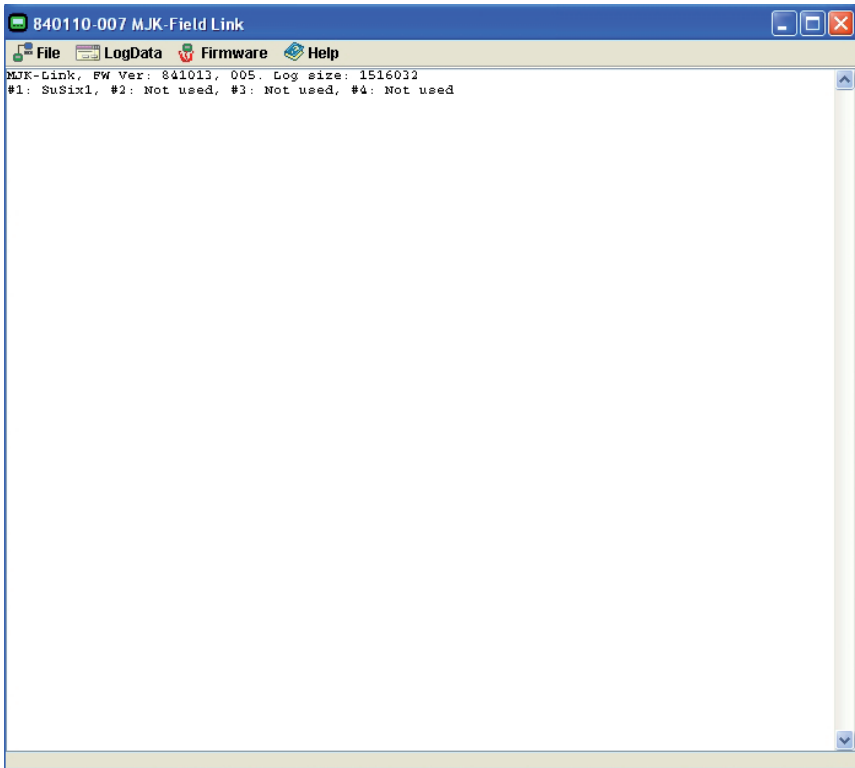

If the connection fails, first remove the cable and then re-connect it.

B. Save Log Data


1. Select "LogData" in the menu bar and click "Save Log to File".
2. Assign a file name, find the destination you want to save the file to, and click "Save". Consequently the file is saved, and the contents is displayed.

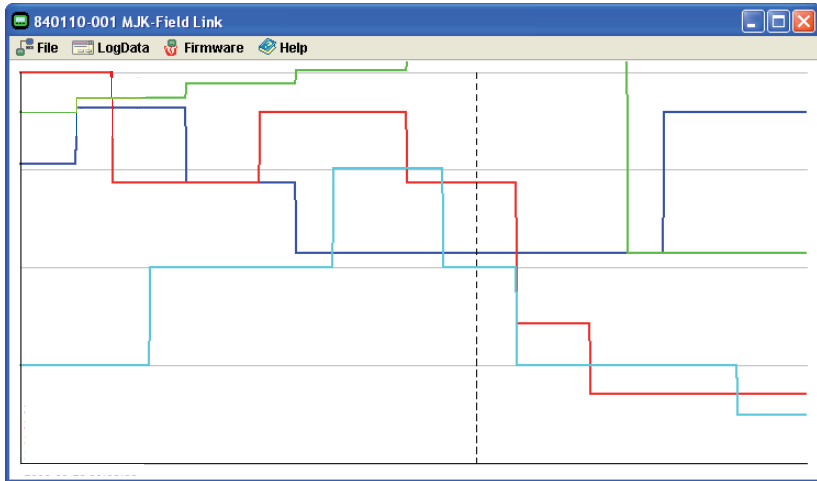

C. Upgrade Display Firmware

Important: Always upgrade the display firmware before you upgrade the converter software.

1. Select "Firmware" in the menu bar and click "Display".
2. Locate the "MJK Field FW" directory on the CD-ROM, select the 841xxx-xxx.hex file (or similar 841*.hex) and click "Open".
3. Click OK when the "Display Firmware" dialogue box appears and prompts for programming the display Flash memory.

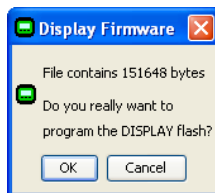

The display unit firmware is then transferred, and the display unit is consequently programmed. Expect this process to take a few minutes.

4. A "Searching for MJK-Field" dialogue box then appears and prompts for disconnecting and re-connecting the USB cable.



Do as suggested and click OK.


5. Meanwhile the **Oxix[®]** Display Unit restarts and displays the MJK logo, the new link status is displayed, and the Display Unit informs that the PC is once again connected.
Click OK on the PC and the **Oxix[®]** Display Unit to return to the **Oxix[®]**.
6. Adjust the **Oxix[®]** Display Unit screen contrast by pressing the two outmost keys simultaneously (indicated by the keys) and press the up/down keys as required.



7. Save the new setting by again pressing the two outmost keys simultaneously.

D. Upgrade Converter Firmware

1. Select "Firmware" in the menu bar and click "Converter".
2. Locate the "MJK Field FW" directory on the CD-ROM, select the "842xxx-xxx.hex" file (or similar) and click "Open".
3. Select the required **Oxix**[®] (option 1, 2, 3 or 4) and click OK when the "Converter Firmware" dialogue box appears and prompts for selecting the converter to program.

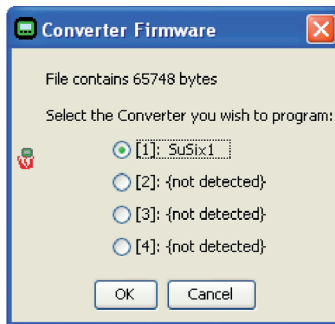

The converter firmware is then transferred, and the converter Flash programming is initiated. Expect this process to take a few minutes.

4. When the Flash programming is done, click OK on the PC and the **Oxix**[®] Display Unit to return to the **Oxix**[®] display.
5. If required you may adjust the **Oxix**[®] Display Unit screen contrast by pressing the two outmost keys simultaneously, press the up/down keys as required, and save the new setting by again pressing the two outmost keys simultaneously.

E. Install/Add Languages

All languages are removed during a display firmware upgrade. Consequently the required languages must be re-installed at this stage.


1. Select "File" in the menu bar and click "Languages".
2. A dialogue appears showing the currently installed languages (none following a firmware upgrade).
You can now either add or delete the required languages.
3. Click "Add", select the required language text file (or language pack) in the "MJK Field Display Unit text files" directory on the CD-ROM (for example 841513-008.txt) and click "Open".
4. Select for example "841500 J Europe N+W+S+US" in the "Add Language" dialogue box (N+W+S+US = North, West, South and USA) and click OK.



5. The languages are then transferred and loaded.
If required, you can remove one or more languages by selecting them from the list, clicking "Delete" and "Close".

Appendix C. Front Panel Cut-out Drawing

The dotted line indicates the front panel outline and measures 155 x 145 mm.

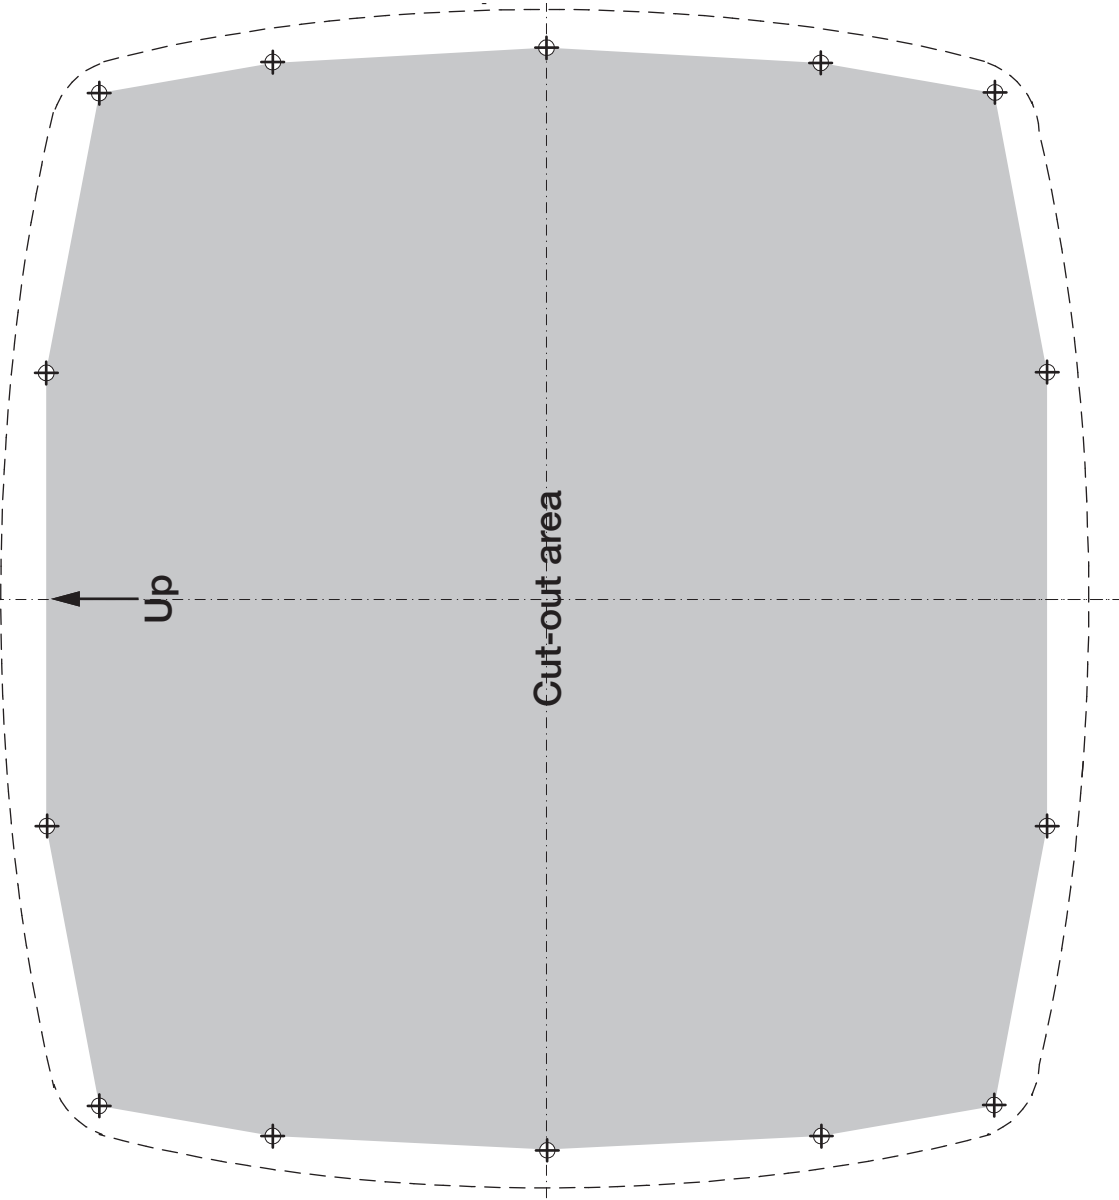


This page intentionally left blank.

Appendix D. Log Files

The example log file shown below is the result of a CSV file from the converter (see "Save Log Data" procedure on page 91) having been opened in with Microsoft[®] Excel[®] spread sheet utility.

The example below illustrates a Oxix[®] converter being logged every 10 seconds.

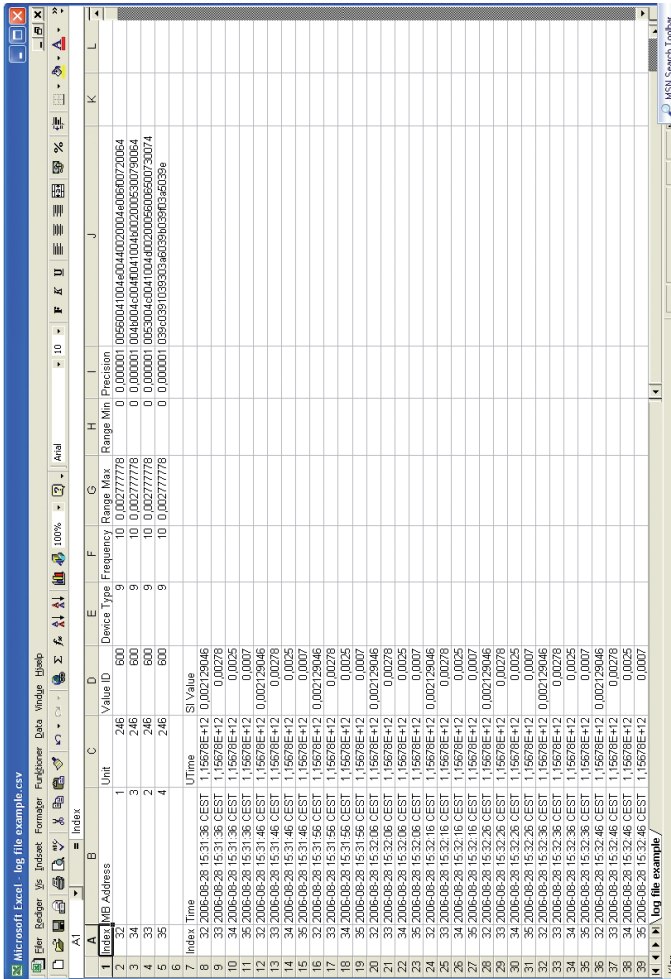

A	B	C	D	E	F	G	H	I	J	K	L
Index	MB Address	Unit	Value ID	Dence Type	Frequency	Range Max	Range Min	Precision			
1	32	600	246	9	10	0.00277778	0	0.000001	0056004100400400000040050072064		
2	32	600	246	9	10	0.00277778	0	0.000001	0056004100400400000040050072064		
3	33	600	246	9	10	0.00277778	0	0.000001	00530040040004000000500650730074		
4	33	600	246	9	10	0.00277778	0	0.000001	00530040040004000000500650730074		
5	35	4	246	9	10	0.00277778	0	0.000001	0394038103930348039039036039a		
6	35	4	246	9	10	0.00277778	0	0.000001	0394038103930348039039036039a		
7	Index	Time	UTime	SI Value							
8	32	2006-09-29 15:31:36	CEST	1.5678E+12	0.00272946						
9	33	2006-09-29 15:31:36	CEST	1.5678E+12	0.00278						
10	34	2006-09-29 15:31:36	CEST	1.5678E+12	0.0025						
11	35	2006-09-29 15:31:46	CEST	1.5678E+12	0.00212946						
12	35	2006-09-29 15:31:46	CEST	1.5678E+12	0.00278						
13	33	2006-09-29 15:31:46	CEST	1.5678E+12	0.00278						
14	34	2006-09-29 15:31:46	CEST	1.5678E+12	0.0025						
15	35	2006-09-29 15:31:46	CEST	1.5678E+12	0.0007						
16	32	2006-09-29 15:31:56	CEST	1.5678E+12	0.00212946						
17	33	2006-09-29 15:31:56	CEST	1.5678E+12	0.00278						
18	34	2006-09-29 15:31:56	CEST	1.5678E+12	0.0025						
19	35	2006-09-29 15:31:56	CEST	1.5678E+12	0.0007						
20	35	2006-09-29 15:32:06	CEST	1.5678E+12	0.00278						
21	33	2006-09-29 15:32:06	CEST	1.5678E+12	0.00278						
22	34	2006-09-29 15:32:06	CEST	1.5678E+12	0.0025						
23	35	2006-09-29 15:32:06	CEST	1.5678E+12	0.0007						
24	32	2006-09-29 15:32:16	CEST	1.5678E+12	0.00212946						
25	33	2006-09-29 15:32:16	CEST	1.5678E+12	0.00278						
26	34	2006-09-29 15:32:16	CEST	1.5678E+12	0.0025						
27	35	2006-09-29 15:32:16	CEST	1.5678E+12	0.0007						
28	35	2006-09-29 15:32:26	CEST	1.5678E+12	0.00278						
29	33	2006-09-29 15:32:26	CEST	1.5678E+12	0.00278						
30	34	2006-09-29 15:32:26	CEST	1.5678E+12	0.0025						
31	35	2006-09-29 15:32:26	CEST	1.5678E+12	0.0007						
32	32	2006-09-29 15:32:36	CEST	1.5678E+12	0.00212946						
33	33	2006-09-29 15:32:36	CEST	1.5678E+12	0.00278						
34	34	2006-09-29 15:32:36	CEST	1.5678E+12	0.0025						
35	35	2006-09-29 15:32:36	CEST	1.5678E+12	0.0007						
36	32	2006-09-29 15:32:46	CEST	1.5678E+12	0.00212946						
37	33	2006-09-29 15:32:46	CEST	1.5678E+12	0.00278						
38	34	2006-09-29 15:32:46	CEST	1.5678E+12	0.0025						
39	35	2006-09-29 15:32:46	CEST	1.5678E+12	0.0007						

The entries are described on the following page.

Index Converter ID (here four converters: 32, 33, 34 and 35)

MB Address Modbus address (here: 1, 2, 3 and 4)

Unit SI unit according to the MJK unit codes (here: 246=NTU)

MJK Unit Codes		
Code no.	Unit	
16	GPM	gallons per minute
17	l/min	litres per minute
19	m³/h	cubic meters per hour
23	MGD	million gallons per day
24	l/sec	litres per second
28	m³/sec	cubic meters per second
57	%	percent
95	mg/l	milligrams per litre
96	kg/l	kilograms per litre
97	g/l	grams per litre
130	ft³/h	cubic feet per hour
138	l/h	litres per hour
139	ppm	parts per million
246	NTU	Nephelometric Turbidity Units
248	FNU	Formazin Nephelometric Units
249	EBC	European Brewing Convention
250	FTU	Formazine Turbidity Units

Value ID Modbus address for flow (here: 600)

Device Type The device type (here: 9 = SuSix®)

MJK Device Type Codes	
Code no.	Unit
1	Display
2	MagFlux
3	Connect
4	702 Comtroller
5	Shuttle
6	pH-transmitter
7	Redox
8	Pressure transmitter
9	SuSix
10	Field log
11	Oxix


Frequency Log interval in seconds (here: 10 seconds)

Range Max Maximum value for graph

Range Min	Minimum value for graph
Precision	The precision of the SI value
Column J	The sensor name as entered by the operator.
Time	Date and time in Central European Standard Time (CEST)
UTime	The time in UNIX format. Number of seconds since January 1, 1970.
SI Value	The value in SI units (S ystème I nternational d'Unités)

To plot the log file's data, proceed as follows:



1. Start Excel and open the csv log file.
2. Sort by "Index", click the "Diagram Guide" tool in the toolbar and select the required curve or graph (see example on the next page).

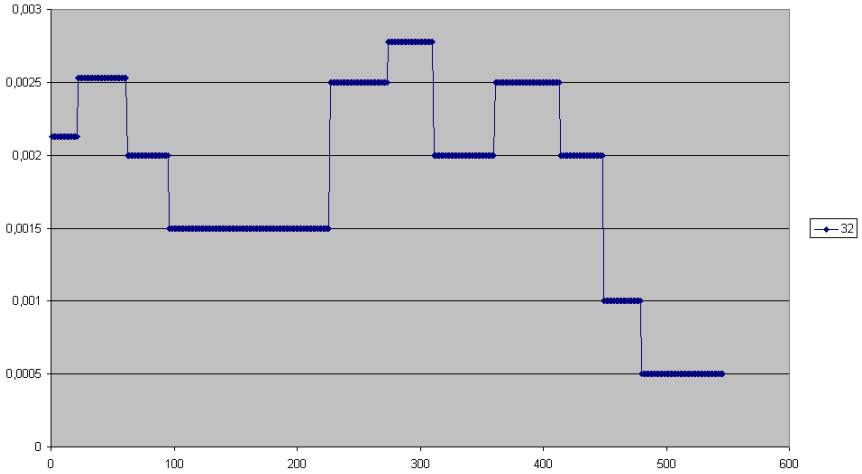

Appendix E. Input/Output Connections

The digital in- and outputs, DI and DO, can be inter-connected to external equipment to achieve a number of functions such as alarms, counter reset, flow direction indication, etc.

The two schematics below illustrate a simplified mode of operation.

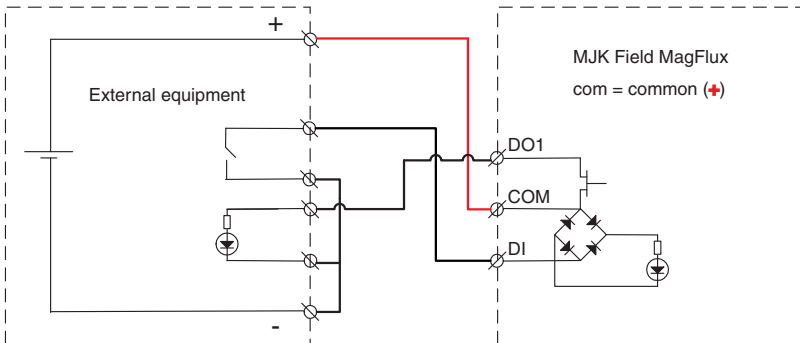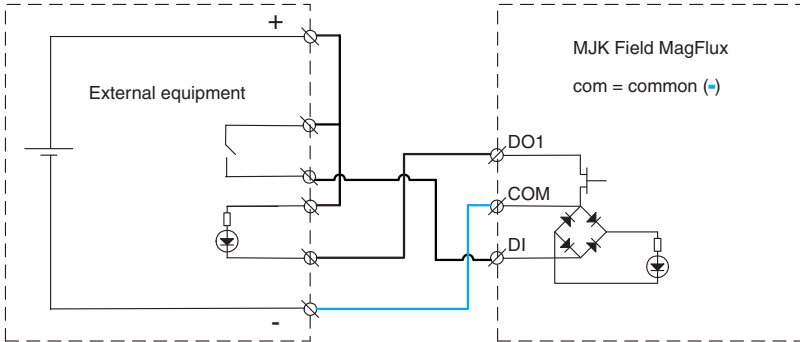

Appendix F. Quick Guide - Oxix Calibration


Valid from firmware version 846003-001, a new calibration menu and method have been introduced in the Oxix converter.

A factory calibration of both zero point and span has been made at delivery; these calibrations can be done independently of each other. It is not usually necessary to calibrate. We recommend checking the zero position every 6 to 12 months.

The calibration is saved in the converter and you will need to conduct a new calibration if the sensor is moved to another converter.


We recommend conducting a factory reset of the sensor before conducting a new calibration, since you avoid that any errors in an existing calibration affect the new calibration.

We have also added a menu with the possibility of adjusting salinity levels in the measurement.

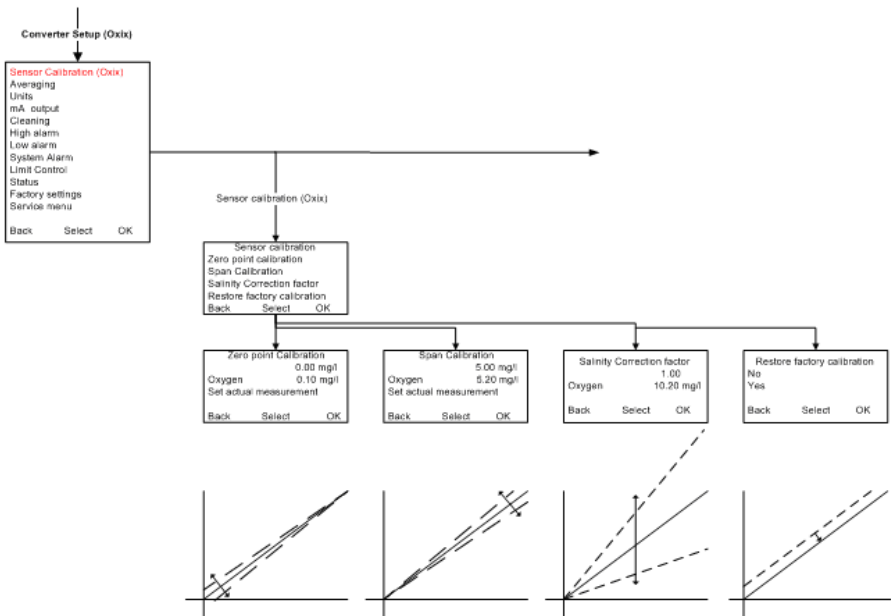

Zero Point Calibration

Zero point Calibration		
		0.00 mg/l
Oxygen		0.10 mg/l
Set actual measurement		
Back	Select	OK

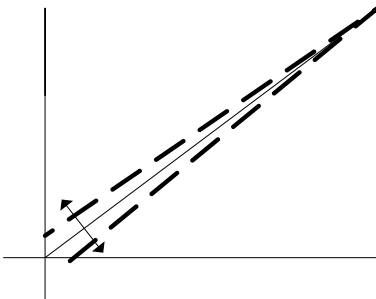

A zero point check or calibration is conducted as follows:


- The sensor is set for a zero point solution. The current measurement is shown in line 2 (0.10mg/l in this example).
- Set the desired measuring value on the first line using the up and down arrow keys.
- Save the current measurement setup by pressing OK.

The value is saved in the converter and will correct the measurement value of the sensor.

See section **Guide to Oxygen-free Solution for Checking Oxix D.O. Sensor Zero Point.**

Span Calibration

Span Calibration		
		5.00 mg/l
Oxygen		5.20 mg/l
Set actual measurement		
Back	Select	OK

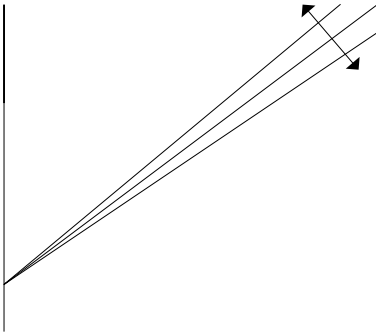

A span check or calibration is conducted as follows:

- The sensor is measuring. The current measurement is shown in line 2 (5.20 mg/l in this example).
- Set the desired measuring value on the first line using the up and down arrow keys.
- Save the current measurement setup by pressing OK.

It is generally difficult to conduct a span calibration. Usually, a reference sensor is used to verify the measurement. For non-oxygen solutions, a variation of 1 to 5% between two sensors can occur (even when the sensors are placed right next to each other). Air bubbles on the optical

window will create measurement variations.

Theory on making oxygen saturated solution


An oxygen saturated solution can be made from demineralised water being oxygenated for a minimum of 30 minutes with atmospheric air. This saturation can then be calculated into an oxygen concentration.

The temperature of the solution is measured with decimal and the atmospheric pressure is measured with mm Hg.

The ppm or mg/l value of the saturated solution at the given temperature can then be decided by using a matrix.

Salinity Correction Factor

Zero point Calibration		
		0.00 mg/l
Oxygen		0.10 mg/l
Set actual measurement		
Back	Select	OK

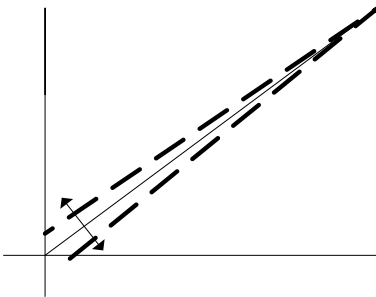

Oxix in salinity applications

A salinity correction factor is entered as follows:

- The sensor is measuring. The current measurement is shown in line 2 (10.20 mg/l in this example).
- Set the desired salinity correction factor on the first line using the up and down arrow keys. The interval is from 0.500 to 1.500.
- Save the current correction factor setup by pressing OK.


When measurement is done in the ppm or mg/litre units, a salinity correction is required (not when measuring in % SAT!).

The correction factor for the current application is found in a matrix with factors for different salinity levels, where the salinity level is shown by electrical conductivity.

It is assumed that the salinity level in the application is stable, as the factor can only be entered manually. Alternatively, Oxix can be used without correction factor and in itself correct the DO measuring based on the measured conductivity by third-party equipment.

Restore Factory Calibration

Zero point Calibration		
	0.00 mg/l	
Oxygen	0.10 mg/l	
Set actual measurement		
Back	Select	OK

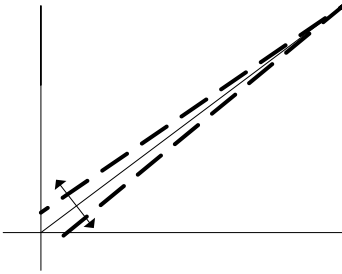

The sensor should be reset before calibrating zero point or span by using Reset Factory Calibration.

This helps avoiding any errors in an existing calibration affecting the new calibration.

Guide to Oxygen-free Solution for Checking Oxix D.O. Sensor Zero Point

Method

- Clean Oxix[®] and its optical window thoroughly.
- Dissolve 3 tablespoons Na₂SO₃ in 4 litres of tap water in an open container (bucket).
- Stir for about 1 minute.
- Immerse the sensor and let it rest in the solution for at least 30 minutes. (Towards the bottom with the window down; check that there are no air bubbles on the lens).

Notes

This solution actually contains a concentration of approximately 0.10 ppm dissolved oxygen. In time, if the solution is left alone, stratification will occur so that the concentration will be higher towards to the surface.

If you need a reference sample with a dissolved oxygen concentration close to zero (approx. 0.02 ppm), the reference sample must be made with demineralised water and the solution must rest for 12-24 hours before measuring it.

It is important that the sensor and the optical window are completely clean when zero-point or calibration is conducted.

How it works

Na₂SO₃ (sodium sulphite) removes oxygen from the solution since Na₂SO₃ is oxidized by O₂ (oxygen) into Na₂SO₄ (sodium sulphate) following the reaction:
$$2\text{Na}_2\text{SO}_3 + \text{O}_2 \rightarrow 2 \text{Na}_2\text{SO}_4$$

Materials

- Bucket
- Measuring jug
- Tablespoon

Chemicals/Reagents

Sodium sulphite, Na₂SO₃, CAS-Nr. 7757-83-7 (Supplier VWR, Bie & Berntsen)


Tap water (alternatively, demineralised water)

Safety Precautions

Safety instructions for Na₂SO₃: None. There are no R- or S-phrases for the product.


Main Menu Overview

Display Overview Menu

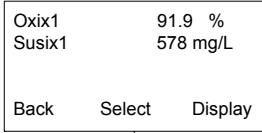


Display setup


Converter Overview Menu

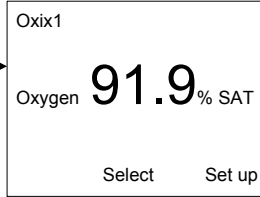


Main Menu

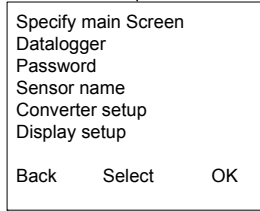


Specify main Screen

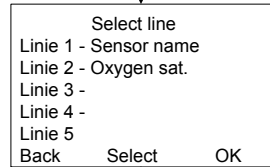


Select line content

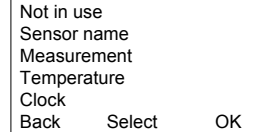


Sensor name

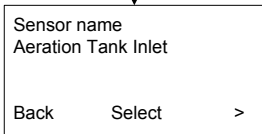

Main Menu Overview (continued 2)

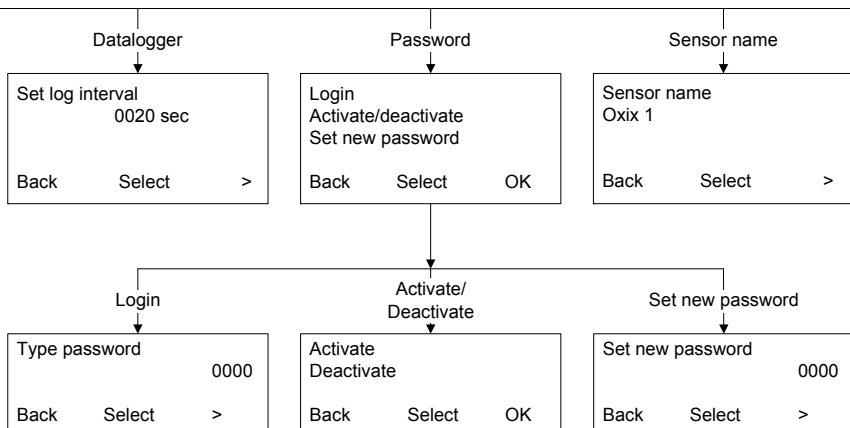


Main Menu Overview (continued 3)

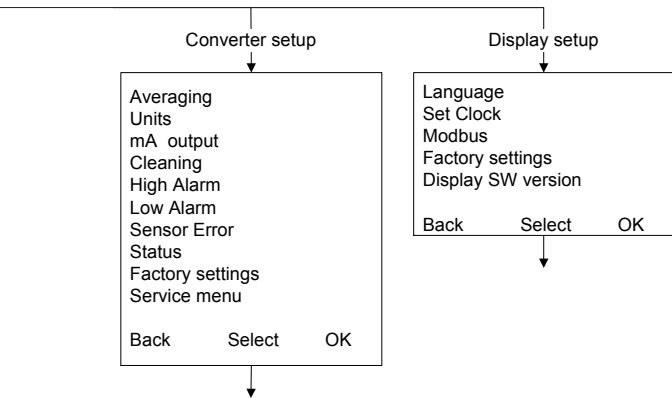


This page intentionally left blank.

Converter Setup Menu Overview

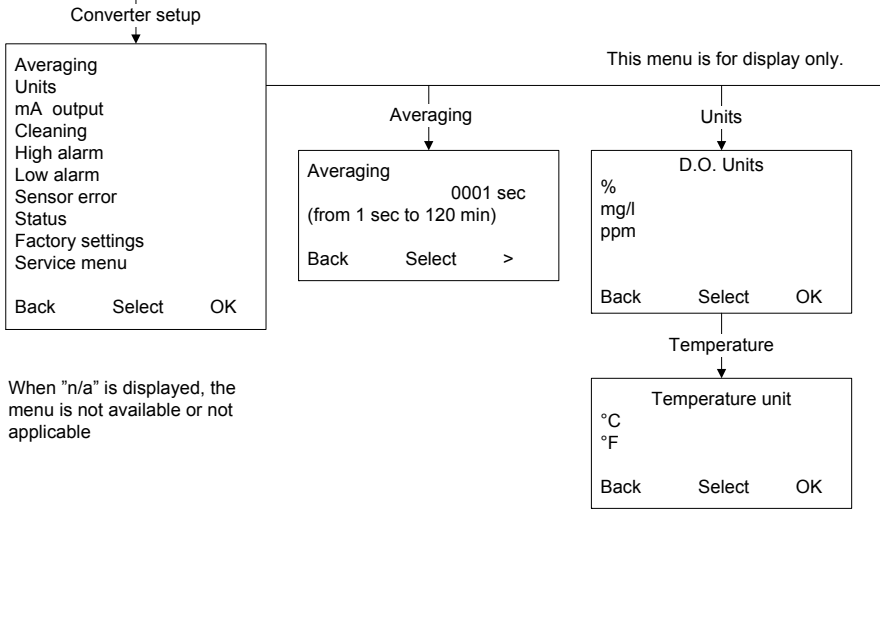


When "n/a" is displayed, the menu is not available or not applicable


Converter Setup Menu Overview (continued 2)

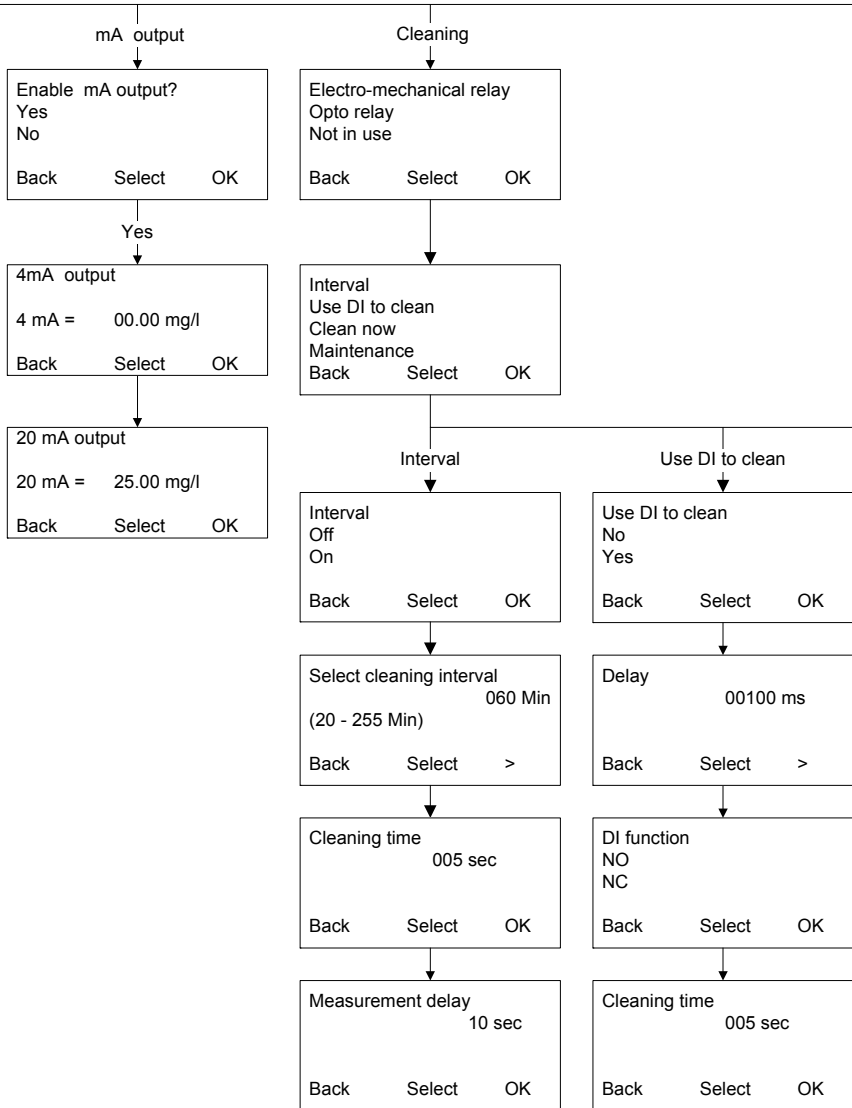


Converter Setup Menu Overview (continued 3)

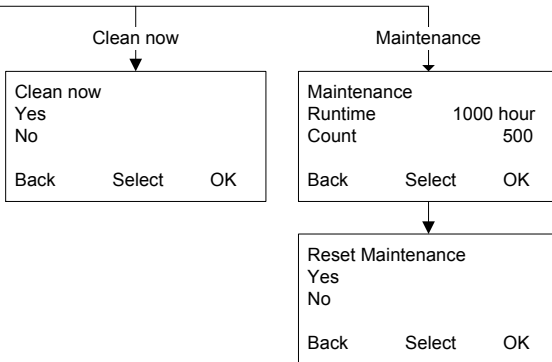


Converter Setup Menu Overview (continued 4)

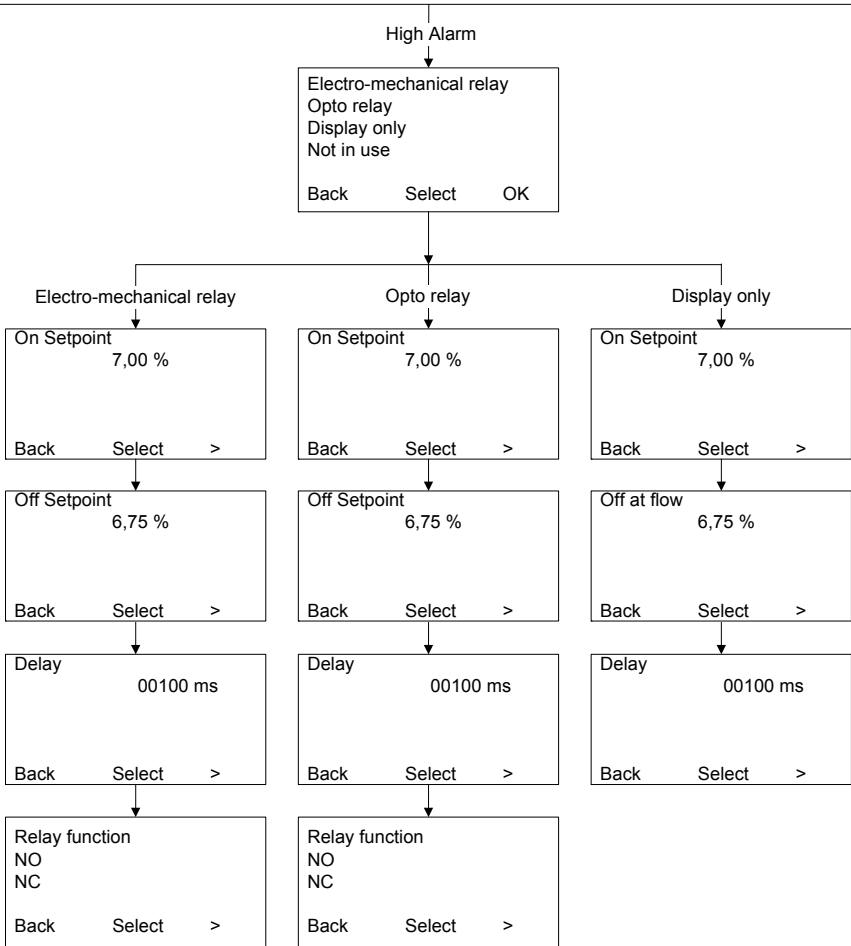


Converter Setup Menu Overview (continued 5)

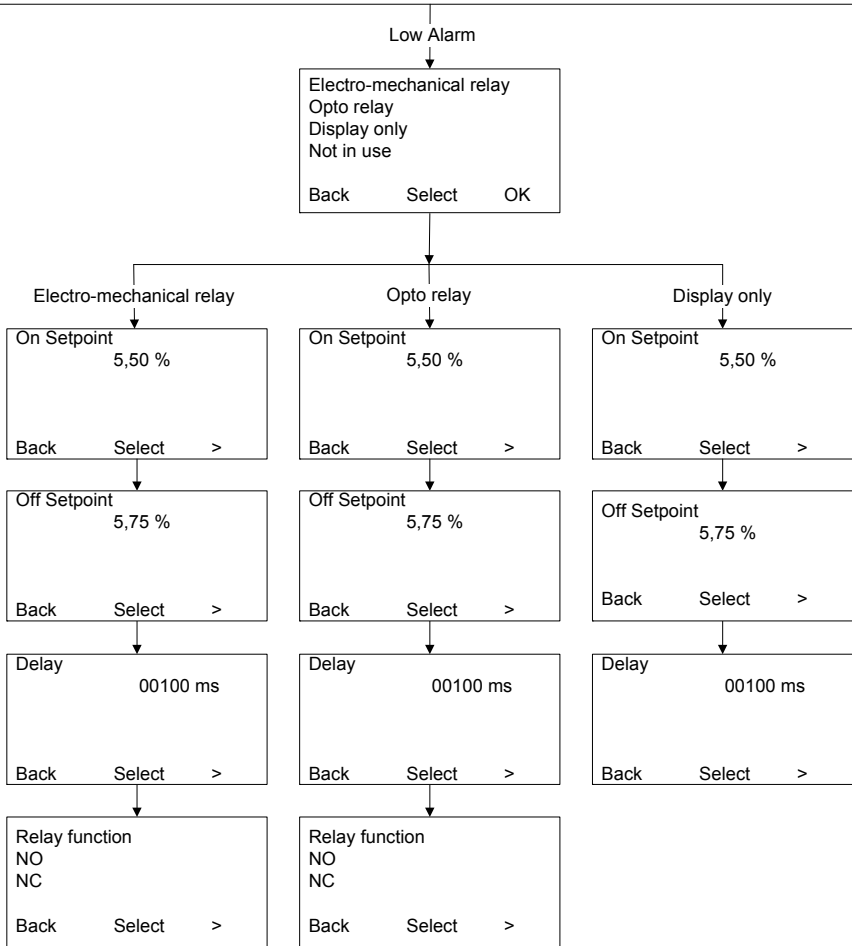

Converter Setup Menu Overview (continued 6)

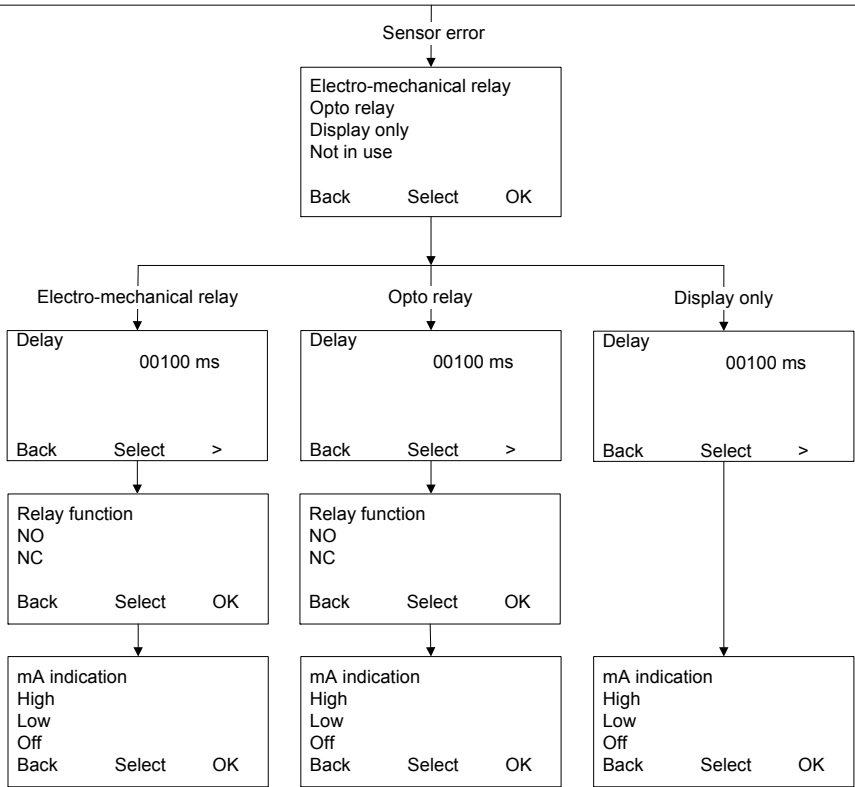


Converter Setup Menu Overview (continued 7)

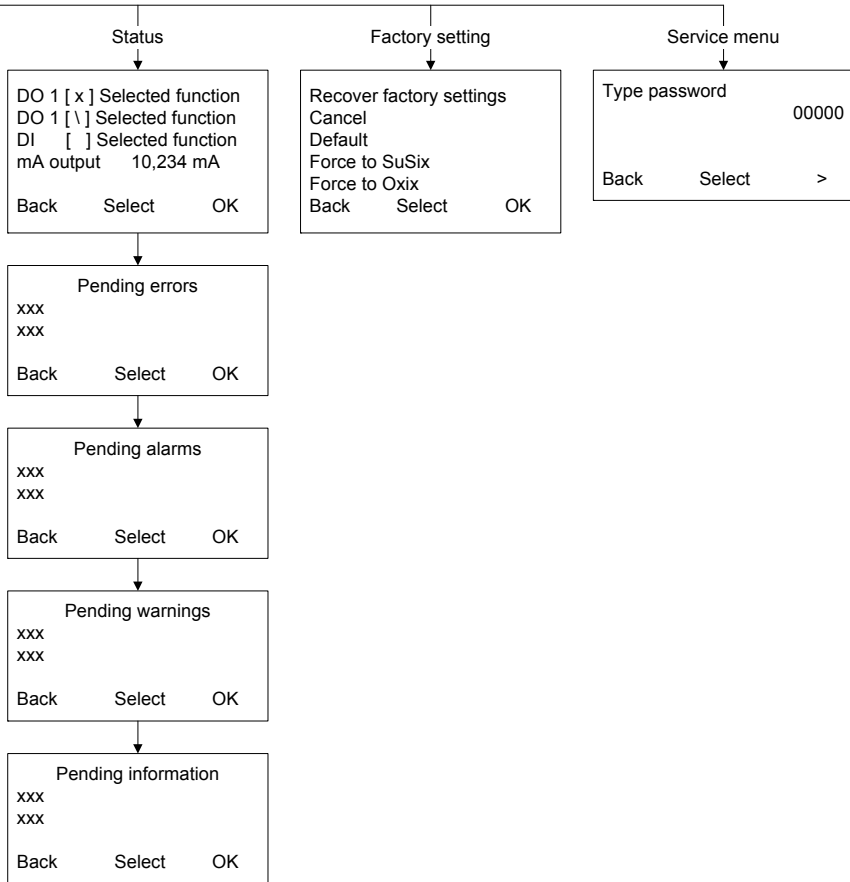


This page intentionally left blank.

Service Menu Overview


- Sensor Data
- Sensor Calibration
- Converter SW. Version.
- Product data
- Reset Counter Time
- Internal meas. & cal.
- Calibrate mA
- Test Primary value
- Read eventlog
- Communication log
- Back On Stock
- Autodetect sensor type
- Main supply frequency
- Back Select OK

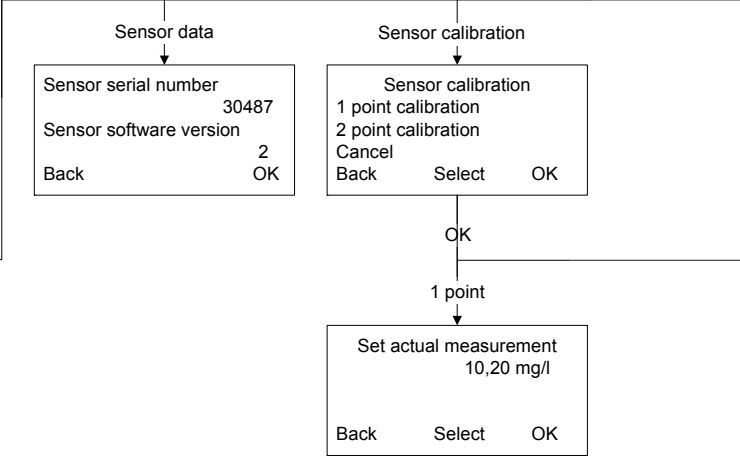


Service Menu Overview (continued 2)

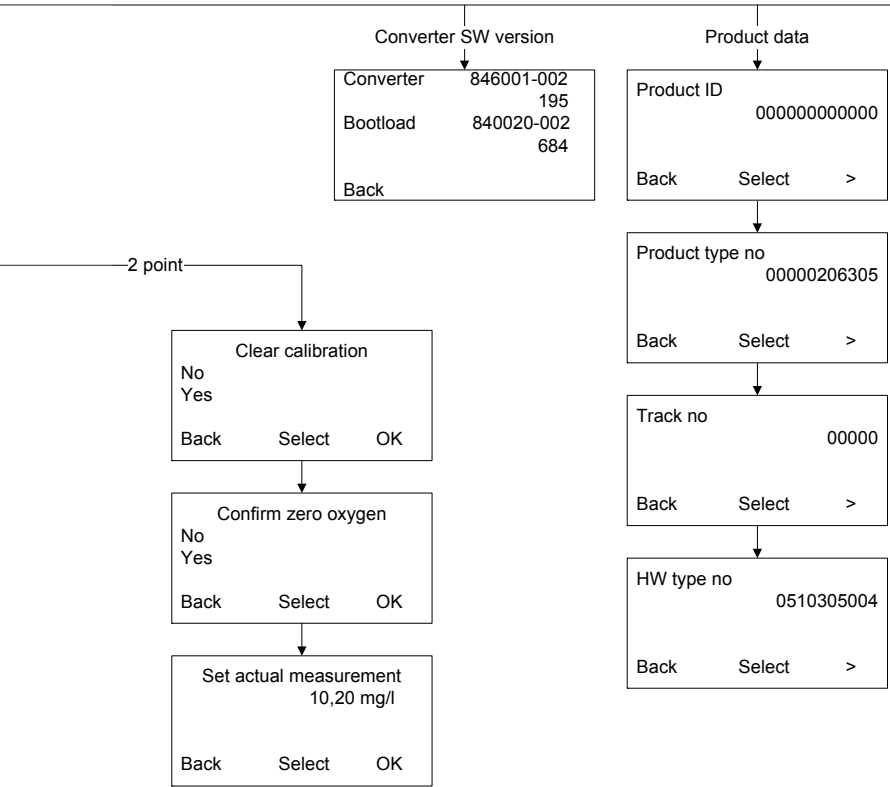


Service Menu Overview (continued 3)

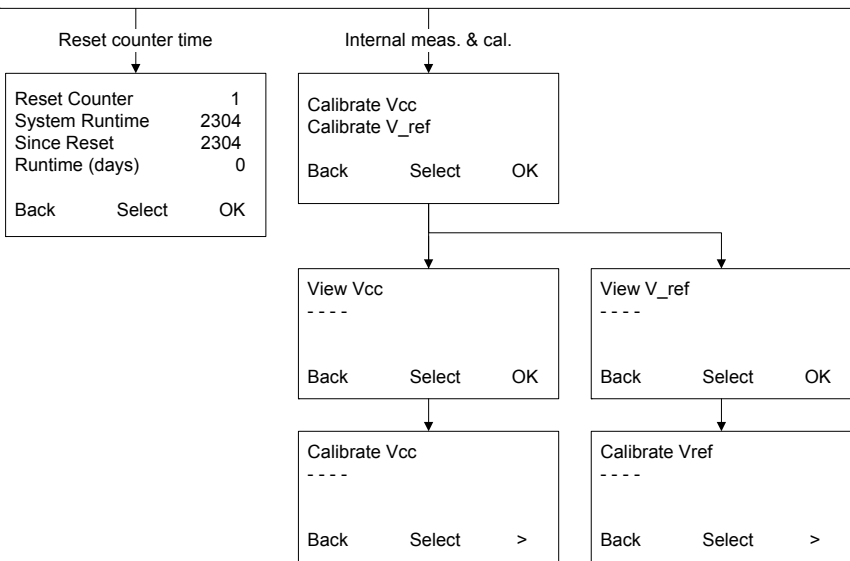

Service Menu Overview (continued 4)

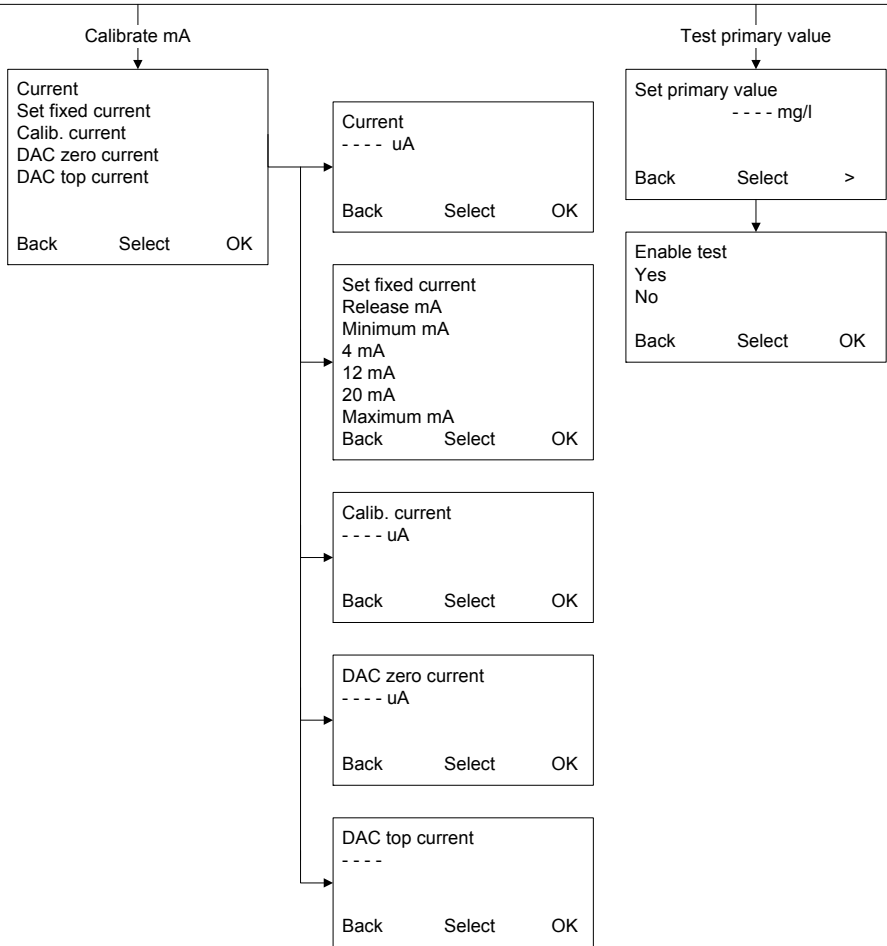

Service Menu Overview (continued 5)

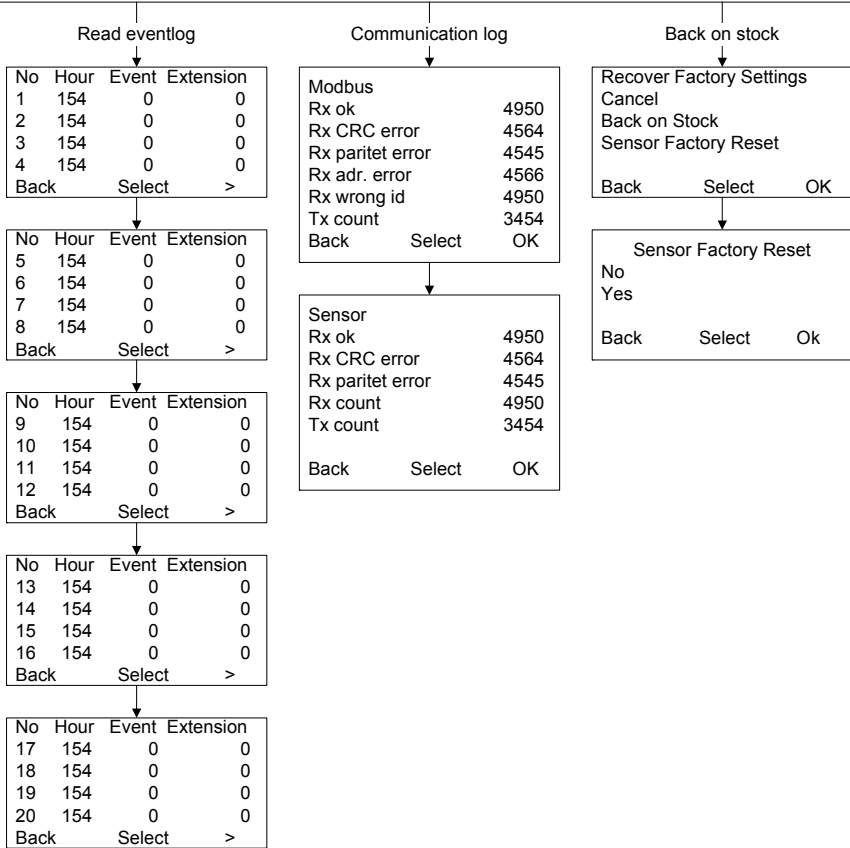


Service Menu Overview (continued 6)

Mains supply frequency


Mains supply frequency
50 Hz
60 Hz

Back Select OK


Display Setup Menu Overview

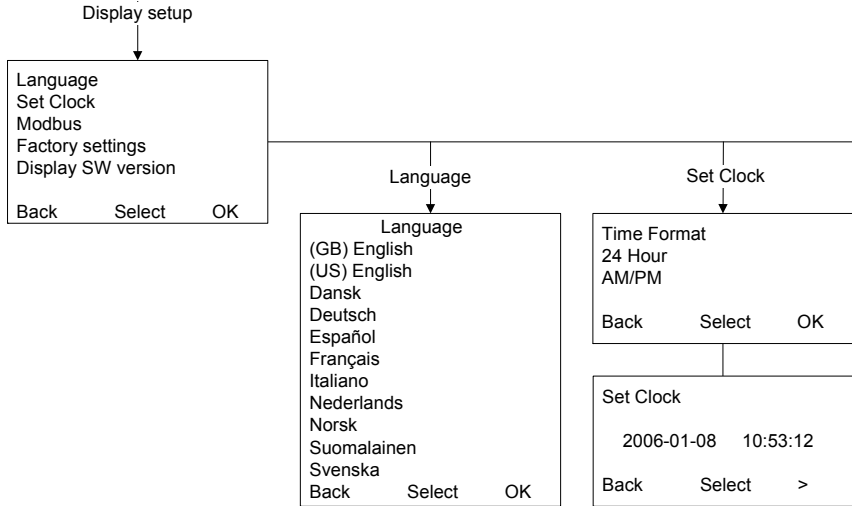

Display Setup Menu Overview (continued 2)

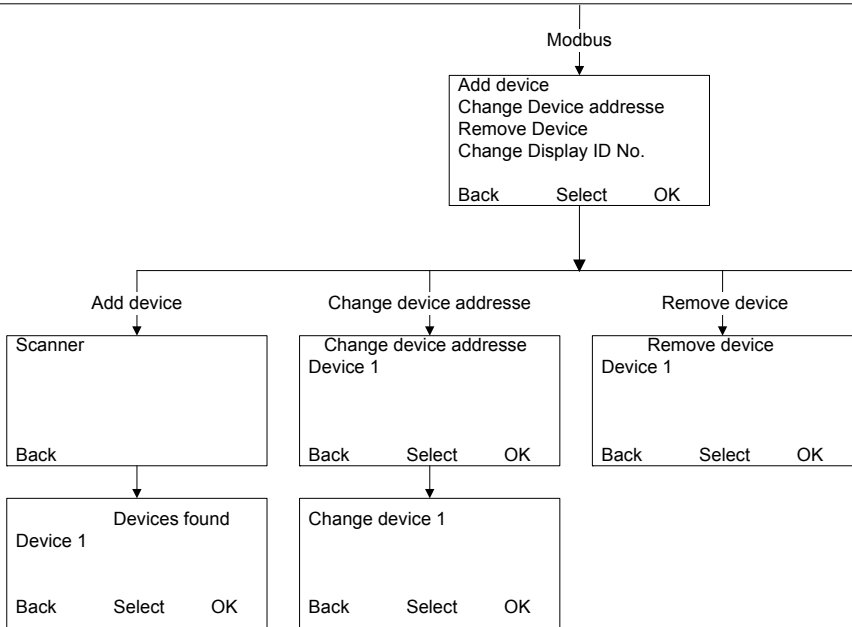

Display Setup Menu Overview (continued 3)

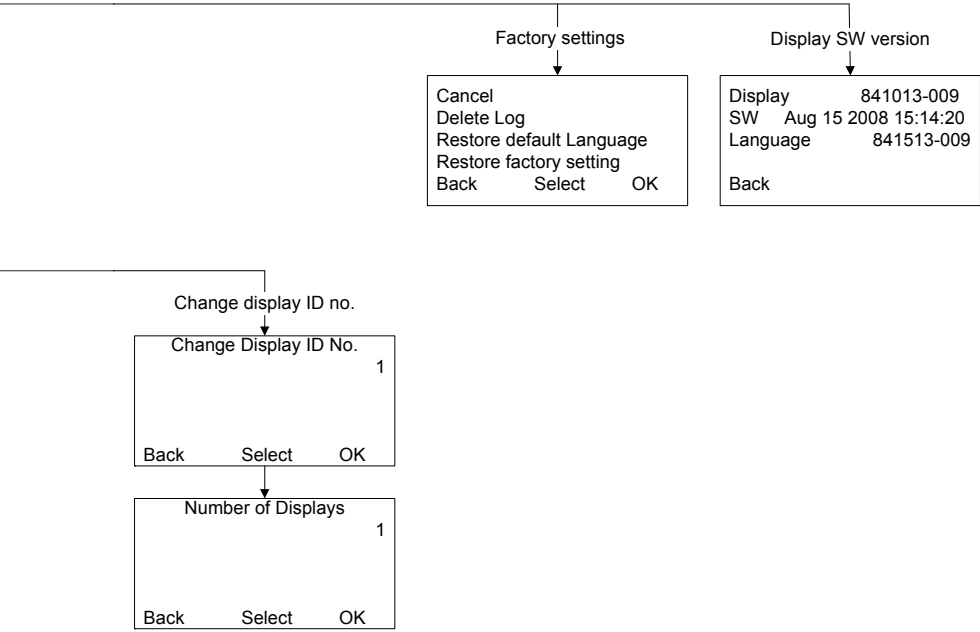

Index

A

accessories 17
 accuracy 15
 activate/deactivate 48
 Add Device 75
 aeration 20
 alarms 12, 85
 analogue output 12, 27
 programming 27
 approvals 2

B

Back on Stock 70
 battery 15
 baud 15

C

cable 16
 Calibrate mA 67
 calibration 63, 67
 0-point 21
 2-point 21
 calibration 21
 Change controller ID 76
 Change device address 76
 Change password 48
 cleaning
 display 83
 sensor 83
 cleaning 54
 clock 15
 Clock 43
 Communication log 70
 configuration
 examples 31
 conformity 2
 contrast adjustment 40
 converter overview menu 41
 Converter setup 51
 Converter SW Ver. 64

D

data logger 11, 44
 device type 98
 digital input
 programming 28
 digital output 12, 27, 101
 programming 27

dimensions 79
 converter and display unit 80
 immersion fitting 81
 sensor 79
 DI selected function 60
 display 11, 38
 one connected unit 38
 several connected units 39
 Display SW Version 77
 DO1 selected function 60
 DO2 selected function 60

E

EEC 2
 electrical mounting 23
 EMC 2
 error messages 9, 85
 Ex approval 2
 explosion hazards 13

F

Factory settings 60, 77
 features 11
 Field Link 11, 89
 firmware 9, 89
 fluorescence 10
 front panel 95
 functional tests 83
 fuse ratings 24
 fuses 19

G

gel 10
 graph 11, 12, 46

H

High alarm 56
 hotline 7

I

Important! 19, 30
 index 8
 injury 13
 info 86
 initial checks 37
 input, digital 28
 installation 19, 20
 Internal Meas. & Cal 66
 introduction 7

J

jumper 25

K

keys, display 39

L

Language 73
 language 37, 73, 94
 LCD 15
 light emission 10
 log
 capacity 45
 data 91
 files 97
 interval 45
 login 47
 Low alarm 57

M

MagFlux 11
 maintenance 83
 mA Output 53
 mechanical dimensions 79
 menus
 Converter Setup 51
 Converter Setup Menu Overview 106
 Data Logger 44
 Display setup 72
 Display Setup Menu Overview 120
 Main Menu 41
 Main Menu Overview 102
 Sensor Name 49
 Service Menu 61, 62
 Service Menu Overview 114
 Specify Main Screen 42
 Modbus 12, 75
 modular 11
 MOSFET 15

N

NEMA 15
 Not in use 42
 NPT 17

O

operating principles 10
 options
 Activate/Deactivate 48
 Add Device 75
 Autodetect sensor type 71
 Averaging 52
 Back on Stock 70
 Calibrate mA 67
 Change controller ID 76
 Change device address 76
 Change password 48
 Cleaning 54
 Clock 43
 Communication log 70
 Converter Setup 51
 Converter SW Ver. 64
 Datalogger 44
 DI selected function 60
 Display Setup 72
 Display SW Version 77
 DO1 selected function 60
 DO2 selected function 60
 Factory Settings 77
 Factory settings 60
 High alarm 56
 Internal Meas. & Cal. 66
 Language 73
 Login 47
 Low alarm 57
 Mains supply frequency 71
 mA Output 53
 mA output 60
 Meas. 42
 Measurement 42
 Modbus 75
 Not in use 42
 Password 47
 Product Data 65
 Read Event Log 69
 Remove Device 76
 Reset Counter Time 65
 Sensor calibration 63
 Sensor data 63
 Sensor error 58
 Sensor Name 49
 Service Menu 62
 Set Clock 74
 Specify Main Screen 42
 Status 59
 Temperature 43
 Test primary value 68
 Units 52
 order numbers 17
 outputs 27, 101
 overviews 41
 Oxix 11

P

part number	13
password	47
physical mounting.....	13
pop-up alarm.....	12
pop-up events.....	85
power consumption.....	15
power supply.....	15, 16, 24
ppm	16
pressure	16
Product Data.....	65
programming	
input and outputs.....	27

Q

quality.....	7
quenching	10

R

Read Eventlog.....	69
Remove Device	76
repair	13
reset, system.....	40
Reset Counter Time.....	65
response time.....	16
RG	17
RS-485.....	15
RTU.....	12
ruthenium	10

S

safety	13
SCADA.....	12
Sensor	
data	63
error.....	58
Name.....	49
service.....	83
Service Menu	
detailed.....	62
digest	61
Set Clock	74
software	9, 89
specifications.....	15
Status.....	59
SuSix.....	11
system configuration.....	31

T

temperature range.....	15
terminals	
converter	29
sensor	30
Test primary value.....	68
theory	10
trademark.....	7
twisted wire	11

U

units	52, 98
update.....	11
upgrade.....	9, 91, 93
USB	11, 15, 45, 87

V

voltage	
10 - 30 volt DC	24
24 volt AC.....	24
115 volt AC.....	25
230 volt AC.....	25

W

WARNINGS	13, 19, 23, 86
wavelength.....	10
web sites.....	7
weight	15, 16, 19
wiring schematics.....	33, 35

MJK ApS
Byageren 7
DK-2850 Nærum
Denmark
Tel +45 45 56 06 56
Fax +45 45 56 06 46
www.mjk.com

Connect, MjConnect, Chatter, MagFlux, OxiX, pHix compact, Shuttle
and SuSix are registered trademarks of MJK Automation A/S.
© 2013 Xylem, Inc. 3.05 ES MagFlux Manual 02 2013

Liability

MJK Automation A/S are liable to the common rules of Danish law on product liability, however, the liability is reduced to coverage of our public liability insurance of products. To the extent where nothing else follows in lines of invariable rules of law, we are not liable for loss of profits and working deficits or other indirect losses.

Changes

As our products are developed continuously, we reserve the right to make any alterations without prior notice.

