
 


## Instruction Manual

03241

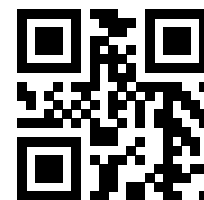

# Brazed Plate Heat Exchangers



# Table of Contents

|                                            |   |
|--------------------------------------------|---|
| 1 Introduction and Safety.....             | 2 |
| 1.1 Introduction.....                      | 2 |
| 1.1.1 Purpose of this manual.....          | 2 |
| 1.2 Safety.....                            | 2 |
| 1.2.1 Safety terminology and symbols.....  | 2 |
| 1.3 User safety.....                       | 2 |
| 1.3.1 General safety rules.....            | 2 |
| 1.3.2 Safety equipment.....                | 2 |
| 2 Storage.....                             | 2 |
| 2.1 Storage requirements.....              | 3 |
| 3 Product Description.....                 | 3 |
| 3.1 General description.....               | 3 |
| 4 Installation.....                        | 3 |
| 4.1 Install the heat exchanger.....        | 3 |
| 5 Operation.....                           | 4 |
| 5.1 Start-up and shut-down procedures..... | 4 |
| 6 Maintenance.....                         | 5 |
| 6.1 Cleaning procedures.....               | 5 |
| 7 Product Warranty.....                    | 5 |
| 7.1 Coverage.....                          | 5 |
| 7.2 Limitations.....                       | 5 |
| 7.3 Warranty claim.....                    | 6 |
| 7.4 Terms and conditions.....              | 6 |

# 1 Introduction and Safety



## 1.1 Introduction

### 1.1.1 Purpose of this manual

The purpose of this manual is to provide necessary information for:

- Installation
- Operation
- Maintenance



#### **CAUTION:**

Read this manual carefully before installing and using the product. Improper use of the product can cause personal injury and damage to property, and may void the warranty.

#### **NOTICE:**

Save this manual for future reference, and keep it readily available at the location of the unit.

## 1.2 Safety



#### **WARNING:**

- The operator must be aware of safety precautions to prevent physical injury.
- Operating, installing, or maintaining the unit in any way that is not covered in this manual could cause death, serious personal injury, or damage to the equipment. This includes any modification to the equipment or use of parts not provided by Xylem. If there is a question regarding the intended use of the equipment, please contact a Xylem representative before proceeding.
- Do not change the service application without the approval of an authorized Xylem representative.



#### **CAUTION:**

You must observe the instructions contained in this manual. Failure to do so could result in physical injury, damage, or delays.

### 1.2.1 Safety terminology and symbols

#### 1.2.1.1 About safety messages

It is extremely important that you read, understand, and follow the safety messages and regulations carefully before handling the product. They are published to help prevent these hazards:

- Personal accidents and health problems
- Damage to the product
- Product malfunction

### 1.2.1.2 Hazard levels



#### **DANGER:**

A hazardous situation which, if not avoided, will result in death or serious injury.



#### **WARNING:**

A hazardous situation which, if not avoided, could result in death or serious injury.



#### **CAUTION:**

A hazardous situation which, if not avoided, could result in minor or moderate injury.

#### **NOTICE:**

- A potential situation which, if not avoided, could result in undesirable conditions.
- A practice not related to personal injury.

### 1.2.1.3 Hazard categories

Hazard categories can either fall under hazard levels or let specific symbols replace the ordinary hazard level symbols.

These are examples of other categories that can occur. They fall under the ordinary hazard levels and may use complementing symbols:

- Crush hazard
- Cutting hazard
- Arc flash hazard

## 1.3 User safety

### 1.3.1 General safety rules

These safety rules apply:

- Always keep the work area clean.
- Pay attention to the risks presented by gas and vapors in the work area.
- Avoid all electrical dangers. Pay attention to the risks of electric shock or arc flash hazards.
- Always bear in mind the risk of drowning, electrical accidents, and burn injuries.

### 1.3.2 Safety equipment

Use safety equipment according to the company regulations. Use this safety equipment within the work area:

- Hard hat
- Safety goggles, preferably with side shields
- Protective shoes
- Protective gloves
- Gas mask
- Hearing protection
- First-aid kit
- Safety devices

#### **NOTICE:**

Never operate a unit unless safety devices are installed. Also see specific information about safety devices in other chapters of this manual.

## 2 Storage

### 2.1 Storage requirements

- Equipment should be protected from the elements and not subject to extreme cold or heat.
- It is advisable to empty and completely dry the heat exchanger.
- The heat exchanger should be stored inside a room with a temperature around 60°F to 70°F and a humidity maximum of 70%.
- Do not store organic solvents or acids in the room. Avoid extreme cold and heat.
- Cover the heat exchanger with plastic, however, still allow for air circulation.
- If not connected to the pipe system, the connections should be covered.
- If heat exchanger must be stored outdoors, above should be followed as much as practical. Especially critical to empty and completely dry the heat exchanger. In addition, the heat exchanger should be protected against the weather by use of a wooden box with a waterproof lining or similar. Especially critical in winter months to avoid freeze-up. Avoid extreme cold and heat.

## 3 Product Description



### 3.1 General description

Brazed plate heat exchangers consist of thin corrugated stainless steel plates between a thicker frame plate and pressure plate that are vacuum brazed together to form a durable, integral piece that can withstand both high pressure and temperature.

The corrugated plate design provides very high heat transfer coefficients resulting in a smaller surface area and compact design.



#### WARNING:

This product can expose you to chemicals including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

## 4 Installation



### 4.1 Install the heat exchanger



#### WARNING:

Many heat exchangers circulate fluids which are irritating or dangerous to the human system. These fluids could cause problems if bolted or threaded joints are not maintained in a leak tight condition at operating pressures, temperatures and no-flow, ambient conditions.



#### CAUTION:

Even if fluids are not irritating or dangerous, a leak could cause a slippery situation on the floor below.



#### CAUTION:


Since one fluid in the heat exchanger is at a higher temperature, any leaks may cause burns.



#### CAUTION:

Brazed plate heat exchangers have exposed sharp metal surfaces. Protective gloves are recommended during handling.

1. Upon receipt of the exchanger, inspect for shipping damage, especially to the connections. If damage is extensive, notify the carrier immediately. Finally, check the heat exchanger against proper drawings and spec sheets to make sure everything is as expected.
2. Before piping up, inspect all openings in the heat exchanger for foreign material. Remove all plugs and shipping covers immediately prior to installing. Make sure it is thoroughly cleaned to remove all preservation materials, if any were used, unless the material is soluble in the system fluid.
3. For single phase fluids, the heat exchanger can be mounted in any orientation that is convenient and should be piped in a counter current, parallel flow arrangement. For two phase fluids, the heat exchanger should be mounted vertically and piped as shown in Figure 1 and Table 1. Connections may be either on the front or back of the exchanger.

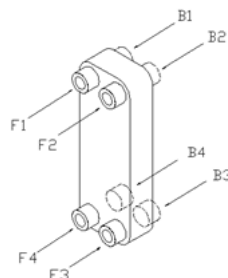

| Liquid to Liquid |       |                                          |       |
|------------------|-------|------------------------------------------|-------|
| General          |       | Snow melt/ Radiant floor/ Domestic/ Pool |       |
| Hot inlet        | F1/B1 | Boiler supply                            | F1/B1 |
| Hot outlet       | F4/B4 | Boiler return                            | F4/B4 |
| Cold inlet       | F3/B3 | B3 Process supply                        | F3/B3 |
| Cold outlet      | F2/B2 | Process return                           | F2/B2 |
| Refrigeration    |       |                                          |       |
| Evaporator       |       | Condenser                                |       |
| Refrig. inlet    | F4/B4 | Refrig. inlet                            | F1/B1 |
| Refrig. outlet   | F1/B1 | Refrig. outlet                           | F4/B4 |
| H2O inlet        | F2/B2 | H2O inlet                                | F3/B3 |
| H2O outlet       | F3/B3 | H2O outlet                               | F2/B2 |


4. Provide air vent valves for the heat exchanger so that it can be purged to prevent or relieve vapor or gas binding.
5. Install proper relief valves and temperature alarms to insure the heat exchanger isn't subject to conditions beyond the intended design.
6. Do not weld or braze brackets or attachments directly to body of heat exchanger.
7. For soldering type connections braze with minimum 45% silver solder and at a maximum 1200° F. For welded type connections use TIG or MIG welding. Avoid overheating. A wet cloth or rag should be placed around the base of the connection. A nitrogen purge

should be used to avoid internal oxidation. Braze or weld with exchanger in the vertical position.

8. The nozzle connections are designed for normal torque force and damage may occur if over tightened. The use of pipe sealant materials compatible with the system fluids is recommended for threaded type connections. Connection load limits should be observed and are shown in Figure 1, Table 1, and Table 2.

**Table 1: 435 psig Standard Design**

| Model                        | T (lbs) | F (lbs) | Mb (in-lbs) | Mv (in-lbs) |
|------------------------------|---------|---------|-------------|-------------|
| 400, 405                     | 2836    | 1150    | 328         | 636         |
| 410, 411, 412                | 4589    | 1375    | 540         | 1416        |
| 415                          | 4589    | 1375    | 540         | 1416        |
| 422, 423, 424, 425           | 6247    | 2300    | 2600        | 4373        |
| 427, 430, 432, 433, 434, 435 | Consult | Factory | Consult     | Factory     |

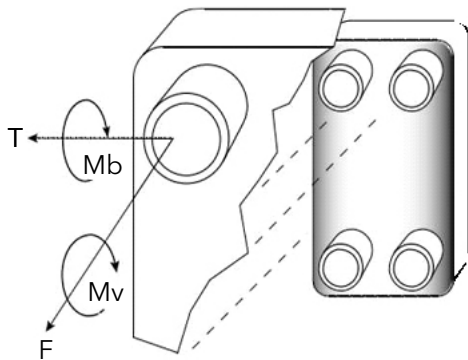


**Figure 1**

**Table 2: 150 psig Pressure Design**

| Model         | T (lbs) | F (lbs) | Mb (in-lbs) | Mv (in-lbs) |
|---------------|---------|---------|-------------|-------------|
| 400           | 200     | 100     | 20          | 200         |
| 410, 411, 412 | 280     | 130     | 27          | 300         |

9. For units with integral mounting tabs ensure unit is fully supported in place prior to tightening the support tab bolts. Do not use the support tab bolts to pull the unit into position. Ensure the correct number and size of bolts for the unit type is used to bolt the unit into place. Bolt unit into place using the maximum torque values in Table 3.
10. For units supplied with mounting studs use Table 4 for maximum torque values. Damage may occur if studs are over tightened. Unit should be fully supported in place prior to tightening the studs. Do not use the studs to pull the unit into position.
11. Units with integral mounting tabs can be mounted using U-bolts or a customer supplied/fabricated bracket.
12. Units with mounting studs can be mounted using a customer supplied/fabricated bracket.

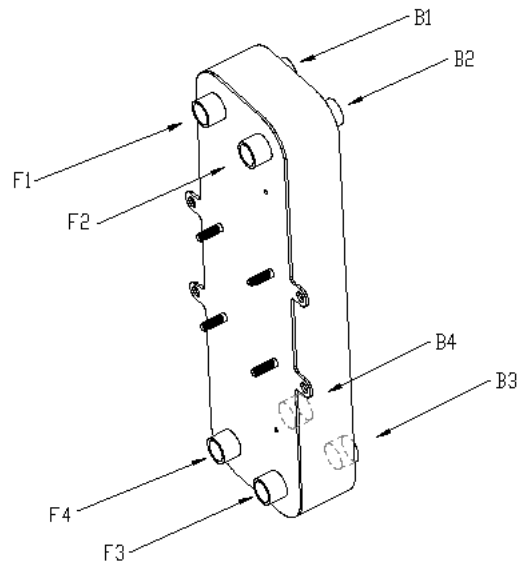

**Table 3: Mounting Tab Bolt Maximum Tightening Force**

| Unit type          | Quantity | Size     | Torque lb-ft |
|--------------------|----------|----------|--------------|
| 400                | 2        | 1/4" -20 | 8            |
| 405                | 4        | 1/4" -20 | 8            |
| 410, 411, 412, 415 | 2        | 3/8" -16 | 24           |
| 422, 423, 424      | 4        | 1/2" -13 | 60           |

**Table 4: Mounting Stud Maximum Torque Values**

| Grade * Clean Lubricated Bolts |          |         |         |
|--------------------------------|----------|---------|---------|
| Stud size                      | 1/4" -20 | 3/8"-16 | 1/2"-13 |
| Torque lb-ft                   | 8        | 24      | 30      |

## 5 Operation



### 5.1 Start-up and shut-down procedures



#### **WARNING:**

A heat exchanger is a pressure vessel designed for operation at certain specific limits of pressure and temperature. The cooling or process system, which includes the heat exchanger, must be safeguarded with safety valves and controls so that these heat exchanger design conditions are not exceeded. All operating personnel should be made aware of these specific design pressures and temperatures prior to start-up.

1. Insure the entire system is clean prior to start-up to prevent plugging of passages with debris. The use of strainers or settling tanks in pipelines leading to the heat exchanger is recommended. The recommended strainer size is 20-24 mesh.
2. Start operating gradually. See Table 5 for suggested start-up and shut-down procedures for most applications. If in doubt, consult the nearest Xylem Heat Transfer representative for specific instructions.

- Do not operate the heat exchanger under pressure and/or temperature conditions in excess of the specified design limits shown on the nameplate attached to the heat exchanger.
- Drain all fluids when shutting down to eliminate possible freeze-up and/or corrosion issues.

Table 5:

| Type of Fluid  | Relative Temperature | Type of Fluid     | Relative Temperature | Start-up Procedure                                                            | Shut-down Procedure                               |
|----------------|----------------------|-------------------|----------------------|-------------------------------------------------------------------------------|---------------------------------------------------|
| Liquid         | Hot                  | Liquid            | Cold                 | Start both fluids gradually at the same time.                                 | Shut down both fluids gradually at the same time. |
| Gas            | Hot                  | Liquid            | Cold                 | Start cold fluid first, then hot fluid.                                       | Shut down hot fluid gradually, then cold fluid.   |
| Condensing gas | Hot                  | Liquid            | Cold                 | Start hot fluid first, then slowly start cold fluid. Avoid temperature shock. | Shut down cold fluid first, then hot fluid.       |
| Liquid or gas  | Hot                  | Vaporizing liquid | Cold                 | Start hot fluid first, then cold fluid.                                       | Shut down cold fluid first, then hot fluid.       |

## 6 Maintenance



### 6.1 Cleaning procedures



#### WARNING:

If the heat exchanger is chemically cleaned, it is important that full characteristics of the fouling material and the chemical cleaning agent be known and care exercised in handling them according to instructions. Use eye protection to prevent damage to your eyes. Wear a respirator when required.



#### CAUTION:

Do not exceed design conditions of heat exchanger during maintenance.

### NOTICE:

Use in accordance with the manufacturer's instructions and check that cleaning compounds are compatible with the materials of the heat exchanger. Since there are a wide variety of cleaning compounds available which are compatible with certain metals and alloy, it is recommended that you contact a representative of the above commercial cleaning products to determine which particular cleaning fluid they would suggest for your type of scaling problem.

- Clean exchangers subject to fouling (scale, sludge deposits etc.) periodically, depending on specific conditions. A sludge or scale coating on the plates can reduce effectiveness and overall performance. A marked increase in pressure drop and/or reduction in performance usually indicates cleaning is necessary.
- As suggested under "Operation", the use of a strainer is recommended if the fluid quality is poor (extensive dirt, debris and contaminants). If the fluids are relatively clean, there should be little problem with fouling so periodic cleaning is adequate.
- Some suggested methods of cleaning either side of the heat exchanger are listed below:
  - Back flush with a high pressure stream of hot water to remove loose deposits.
  - Circulate a hot wash oil or light distillate to remove sludge or similar soft deposits.
  - Use a 5 % solution of phosphoric acid or oxalic acid to remove more stubborn deposits. For optimum results, the solution should be in a back flush type flow pattern. Rinse heat exchanger with clean fresh water after use.
- For refrigerant applications it is recommended that the refrigerant circuit not be chemically cleaned.
- If the heat exchanger is excessively fouled and it cannot be cleaned by commercial cleaning methods, then replacement of the unit is suggested.

## 7 Product Warranty

### 7.1 Coverage

Xylem undertakes to remedy defects in products from Xylem under these conditions:

- The faults are due to defects in design, materials, or workmanship.
- The faults are reported to a local sales and service representative within the warranty period.
- The product is used only under the conditions that are described in this manual.
- All service and repair work that is done by Xylem authorized personnel.
- Genuine Xylem parts are used.

### 7.2 Limitations

The warranty does not cover defects that are caused by these situations:

- Deficient maintenance
- Improper installation
- Modifications or changes to the product and installation that are made without consulting a Xylem authorized representative
- Incorrectly executed repair work
- Normal wear and tear

Xylem assumes no liability for these situations:

- Bodily injuries
- Material damages
- Economic losses

### 7.3 Warranty claim

Xylem products are high-quality products with expected reliable operation and long life. However, should the need for a warranty claim arise, contact your local sales representative or the manufacturer.

EN

### 7.4 Terms and conditions

Review <https://www.xylem.com/en-us/support/terms-and-conditions/> for more information.







# Xylem |'zīlēm|

- 1) The tissue in plants that brings water upward from the roots;
- 2) a leading global water technology company.

We're a global team unified in a common purpose: creating advanced technology solutions to the world's water challenges. Developing new technologies that will improve the way water is used, conserved, and re-used in the future is central to our work. Our products and services move, treat, analyze, monitor and return water to the environment, in public utility, industrial, residential and commercial building services settings. Xylem also provides a leading portfolio of smart metering, network technologies and advanced analytics solutions for water, electric and gas utilities. In more than 150 countries, we have strong, long-standing relationships with customers who know us for our powerful combination of leading product brands and applications expertise with a strong focus on developing comprehensive, sustainable solutions.

For more information on how Xylem can help you, go to [www.xylem.com](http://www.xylem.com)



Xylem Inc.  
175 Standard Parkway  
Cheektowaga, NY 14227-1299  
USA  
Tel: +1 (800) 447-7700  
Fax: +1 (897) 897-1777  
[www.xylem.com/standardxchange](http://www.xylem.com/standardxchange)

Visit our Web site for the latest version of this document and more information  
The original instruction is in English. All non-English instructions are translations of the original instruction.  
© 2024 Xylem Inc.  
Standard Xchange is a trademark of Xylem Inc. or one of its subsidiaries. All other trademarks or registered trademarks are property of their respective owners.