


JOB:	REPRESENTATIVE:	
UNIT TAG:	SUBMITTED BY:	DATE:
ENGINEER:	APPROVED BY:	DATE:
CONTRACTOR:		

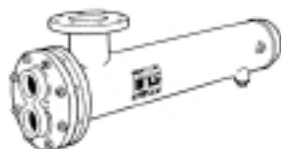

18" Series Type "SU" Heat Exchangers "U" Tube Design

DESCRIPTION

B & G Types "SU" Heat Exchangers are of the shell and tube type. The tube bundle is of "U" bend construction with tube ends expanded into a stationary tube sheet. This construction permits ample expansion or contraction for wide temperature variations. A fluid entering the tubes is heated by steam condensing in the single pass shell. Tube spacers properly support and space each tube for maximum efficiency in steam condensation and drainage.

Standard "SU" Heat Exchangers are constructed according to

ASME requirements for pressure and temperatures. A Manufacturers' Data Report for Pressure Vessels, Form No. U-1, as required by the provisions of the ASME Code Rules, is furnished with each unit upon request. This form is signed by an authorized inspector, holding a national Board Commission, and who is employed by an authorized inspection agency, certifying that construction conforms to the latest ASME code for pressure vessels. The ASME "U" symbol is stamped on each vessel. In addition, each unit is registered with the national Board of Boiler and pressure Vessel Inspectors.

RECOMMENDED "SU" HEAT EXCHANGER MODEL NO.

HEATING SURFACE (SQ. FT.)

1. Steam Pressure
2. Fluid Circulated
3. Total Flow (Expressed in GPM, GRH or lbs./hr)
4. Temperature In/Out
5. Heat Load BTU/hr
6. Pressure Drop (Maximum)
7. Fouling Factor or Percentage of Additional Surface
- Note:** Following applies only to fluids other than water.
8. Specific Gravity
9. Specific Heat
10. Latent Heat
11. Viscosity**
12. Thermal Conductivity

**Expressed in Proper Units and Temperature such as centipoises @ °F

TUBE SIDE

SHELL SIDE

APPROVALS

TYPICAL INSTALLATION OF "SU" HEAT EXCHANGER


Steam Hammer can cause serious damage to the tubes of any Heat Exchanger. A careful consideration of the following points before an installation is made can prevent costly repairs which may be caused by steam hammer.

(a) A vacuum breaker and/or vent, should be used in accordance with the type of system installed.

(b) The proper trap for the steam system installed should be used. (c) The trap and the condensate return line to the trap should be properly sized for the total capacity of the converter.


(d) The trap should be sized for the pressure at the trap, not the inlet pressure to the steam controller.

CAUTION: A properly sized relief valve must be installed on the heater water side to protect heat exchangers from possible damage due to volumetric expansion.

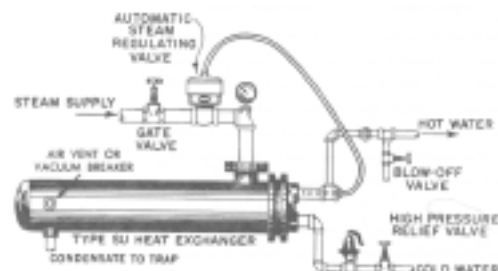

18" Series Type "SU" Heat Exchangers "U" Tube Design

C-121.7A

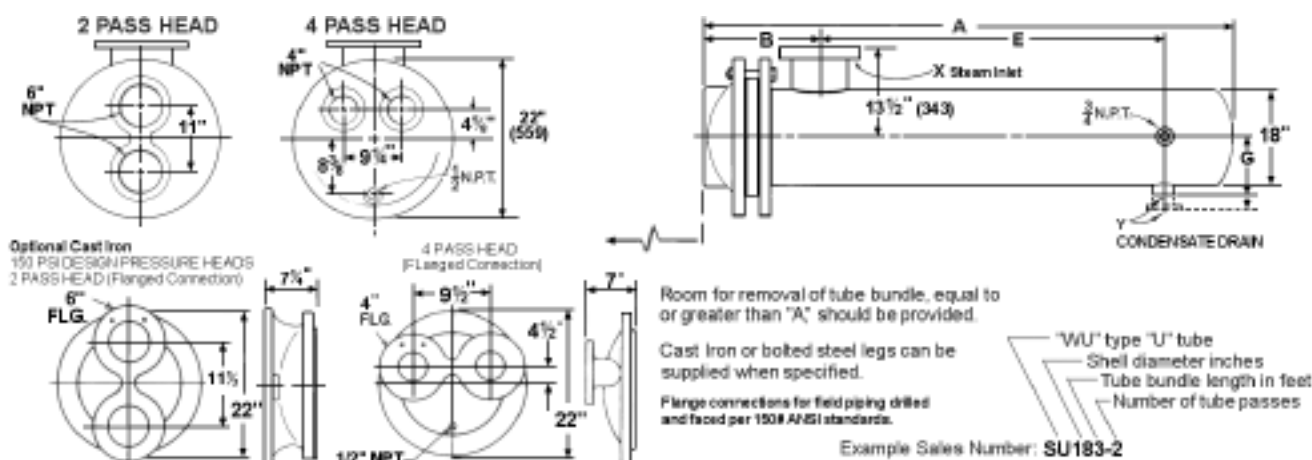

UNIT NUMBER.	DIMENSIONS IN INCHES						HEATING SURFACE Sq. Ft. (Sq. M.)	APPROX. SHIPPING WEIGHT LBS. (KG)
	A	B	E	G	X	Y		
SU183-2	48-1/2 (1232)	17-3/4 (451)	21-1/2 (546)	10-1/2 (267)	6 FLG.	2 NPT	148 (13.7)	712 (323)
SU184-2	60-1/2 (1537)	17-3/4 (451)	33-1/2 (851)	10-1/2 (267)	8 FLG.	2 NPT	195 (18.1)	836 (379)
SU185-2	72-1/2 (1842)	17-3/4 (451)	45-1/2 (1156)	10-1/2 (267)	8 FLG.	2-1/2 NPT	242 (22.5)	960 (435)
SU186-2	84-1/2 (2146)	17-3/4 (451)	57-1/2 (1460)	10-1/2 (267)	10 FLG.	3 NPT	290 (26.9)	1084 (492)
SU187-2	96-1/2 (2451)	17-3/4 (451)	69-1/2 (1765)	10-1/2 (267)	10 FLG.	3 NPT	339 (31.5)	1208 (548)
SU188-2	108-1/2 (2756)	17-3/4 (451)	81-1/2 (2070)	10-1/2 (267)	10 FLG.	3 NPT	387 (36)	1332 (604)
SU189-2	120-1/2 (3061)	17-3/4 (451)	93-1/2 (2375)	10-1/2 (267)	12 FLG.	3 NPT	435 (40.4)	1456 (660)
SU1810-2	132-1/2 (3366)	17-3/4 (451)	105-1/2 (2680)	13-1/2 (343)	12 FLG.	4 NPT	483 (44.9)	1580 (717)

UNIT NUMBER.	DIMENSIONS IN INCHES						HEATING SURFACE Sq. Ft. (Sq. M.)	APPROX. SHIPPING WEIGHT LBS. (KG)
	A	B	E	G	X	Y		
SU183-4	48-1/2 (1232)	17-3/4 (451)	21-1/2 (546)	10-1/2 (267)	6 FLG.	2 NPT	148 (13.7)	712 (323)
SU184-4	60-1/2 (1537)	17-3/4 (451)	33-1/2 (851)	10-1/2 (267)	8 FLG.	2 NPT	195 (18.1)	836 (379)
SU185-4	72-1/2 (1842)	17-3/4 (451)	45-1/2 (1156)	10-1/2 (267)	8 FLG.	2-1/2 NPT	242 (22.5)	960 (435)
SU186-4	84-1/2 (2146)	17-3/4 (451)	57-1/2 (1460)	10-1/2 (267)	10 FLG.	3 NPT	290 (26.9)	1084 (492)
SU187-4	96-1/2 (2451)	17-3/4 (451)	69-1/2 (1765)	10-1/2 (267)	10 FLG.	3 NPT	339 (31.5)	1208 (548)
SU188-4	108-1/2 (2756)	17-3/4 (451)	81-1/2 (2070)	10-1/2 (267)	10 FLG.	3 NPT	387 (36)	1332 (604)
SU189-4	120-1/2 (3061)	17-3/4 (451)	93-1/2 (2375)	10-1/2 (267)	12 FLG.	3 NPT	435 (40.4)	1456 (660)
SU1810-4	132-1/2 (3366)	17-3/4 (451)	105-1/2 (2680)	13-1/2 (343)	12 FLG.	4 NPT	483 (44.9)	1580 (717)

Dimensions are subject to change. If exact dimensions are needed for layout, write for certified prints.

*All 6 Pass units are built to order. Consult factory for dimensions.

DESIGN PRESSURES				DESIGN TEMPERATURES* TUBE & SHELL SIDE	
TUBE SIDE		SHELL SIDE		CAST IRON	BRASS
DESIGN	TEST	DESIGN	TEST		
125 psi	250 psi	150 psi	300 psi	375 °F	300 °F
2 & 4 Pass Head (Flanged Connections) Cast Only					
150 psi	300 psi	150 psi	300 psi	375 °F	-

*For design pressures and temperatures higher than shown, consult B & G Representative for specifications and dimensions.

PART	STANDARD CAST IRON UNIT	BRASS UNIT
	2 & 4	2 & 4 Pass
Head	Cast Iron	Cast Brass
Shell	Steel	Steel
Tube Sheet	Steel	Royal Naval Brass
Tubes 3/4" O.D.	Cooper	Cooper
Tube Support	Steel	Steel
Nuts & Bolts	Steel	Steel

Bell & Gossett

Bell & Gossett
8200 N. Austin Avenue, Morton Grove, IL 60053
Phone (847)966-3700
Facsimile (847)966-9052
www.bellgossett.com

